



Platform Notes: The `dmfe` Fast Ethernet Device Driver

Sun Microsystems, Inc.
4150 Network Circle
Santa Clara, CA 95054
U.S.A. 650-960-1300

Part No. 816-2128-11
May 2002, Revision A

Send comments about this document to: docfeedback@sun.com

Copyright 2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 U.S.A. All rights reserved.

This product or document is distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

Federal Acquisitions: Commercial Software—Government Users Subject to Standard License Terms and Conditions.

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2002 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, CA 95054 Etats-Unis. Tous droits réservés.

Ce produit ou document est distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd.

Sun, Sun Microsystems, le logo Sun, AnswerBook2, docs.sun.com, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

LA DOCUMENTATION EST FOURNIE "EN L'ETAT" ET TOUTES AUTRES CONDITIONS, DECLARATIONS ET GARANTIES EXPRESSES OU TACITES SONT FORMELLEMENT EXCLUES, DANS LA MESURE AUTORISEE PAR LA LOI APPLICABLE, Y COMPRIS NOTAMMENT TOUTE GARANTIE IMPLICITE RELATIVE A LA QUALITE MARCHANDE, A L'APTITUDE A UNE UTILISATION PARTICULIERE OU A L'ABSENCE DE CONTREFAÇON.



Contents

Preface vii

1. The `dmfe` Device Driver 1

Hardware Overview 1

Operating Speeds and Duplex Modes 1

Auto-Negotiation 2

2. Setting Parameters Temporarily or Permanently 3

Introduction 3

The Order of Precedence for the Parameter Settings 4

Setting Parameters Temporarily Using `ndd` 4

 Identifying Devices On the Command Line 5

 Displaying the Available Parameters Using `ndd` 5

 Viewing the Current Setting for a Parameter 5

 Setting a New Value for a Parameter 6

 Specifying a Particular Speed and Duplex Setting 6

 Returning to Auto-Negotiation Mode 7

Setting Parameters Permanently Using the `dmfe.conf` File 8

 Using `dmfe.conf` To Set Parameters for All `dmfe` Devices in a System 8

 Using `dmfe.conf` to Set Parameters for a Particular Device 9

3. Forcing the Network Speed and Duplex Settings for OBP If You Are Booting From the Network	11
Forcing the Speed and Duplex Mode If You Are Booting From the Network	12
Booting From the Network	13
A. Parameter Definitions	15
Driver Parameter Values and Definitions	15
Inspecting the Current Status of the Device	16
Operational Mode Parameters	16
B. Application Programming Interface	19

Tables

TABLE 2-1	Using <code>ndd</code> to List the Parameters for the <code>dmfe</code> Driver	5
TABLE A-1	<code>dmfe</code> Driver Parameters	15
TABLE A-2	Read-Only Parameters That Report the Link Status, Speed, and Mode	16
TABLE A-3	Operational Mode Parameters	16

Preface

This book describes how to configure the `dmfe` (Fast Ethernet) device driver for the Davicom (R) DM9102A devices in the Netra™ X1 and Sun Fire™ V100 Servers.

How This Book Is Organized

Chapter 1 describes the `dmfe` device driver for the Davicom (R) DM9102A device.

Chapter 2 describes how to set the `dmfe` device driver parameter values temporarily by using the `ndd` utility or permanently by editing the `dmfe.conf` file.

Chapter 3 describes how to set parameters for the `dmfe` device to enable you to boot from the network if you have connected your Netra X1 or Sun Fire V100 server to an Ethernet hub that does not support auto-negotiation.

Appendix A lists the parameters for the `dmfe` device driver.

Appendix B describes the application programming interface for the `dmfe` driver.

Using UNIX Commands

This document may not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- AnswerBook2™ online documentation for the Solaris™ software environment
- Other software documentation that you received with your system

Typographic Conventions

Typeface or Symbol	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your <code>.login</code> file. Use <code>ls -a</code> to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
<i>AaBbCc123</i>	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type <code>rm filename</code> .

Shell Prompts

Shell	Prompt
C shell	<i>machine_name%</i>
C shell superuser	<i>machine_name#</i>
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

Accessing Sun Documentation Online

The `docs.sun.com`SM web site enables you to access Sun technical documentation on the Web. You can browse the `docs.sun.com` archive or search for a specific book title or subject at: <http://www.docs.sun.com>

Sun Welcomes Your Comments

We are interested in improving our documentation and welcome your comments and suggestions. You can email your comments to us at:

`docfeedback@sun.com`

Please include the part number (816-2128-11) of this document in the subject line of your email.

The `dmfe` Device Driver

The `dmfe` (Davicom Fast Ethernet) device driver handles the `Davicom(R) DM9102A` devices on the Netra X1 and Sun Fire V100 servers.

This chapter has the following sections:

- “Hardware Overview” on page 11
- “Operating Speeds and Duplex Modes” on page 11
- “Auto-Negotiation” on page 12

Hardware Overview

The DM9102A device provides a 100BASE-TX or 10BASE-T Ethernet network interface, including the PCI interface and Media Access Control (MAC) functions. The internal transceiver, which connects to an RJ-45 connector, provides the physical layer functions. The device can automatically set the link speed to 10 or 100 Mbps and it conforms to the *100BASE-T IEEE 802.3u Ethernet Standard*.

Operating Speeds and Duplex Modes

You can operate the link in any of the following combinations of speed and duplex mode:

- 100 Mbps, full-duplex
- 100 Mbps, half-duplex
- 10 Mbps, full-duplex
- 10 Mbps, half-duplex

These speeds and duplex settings are described in the *Ethernet Standard*.

Auto-Negotiation

A key feature of the Davicom DM9102A Fast Ethernet device is auto-negotiation. The auto-negotiation protocol, as specified by the *Ethernet Standard* allows the device to determine automatically the appropriate speed and duplex settings. When the system is powered on, the device uses the auto-negotiation protocol to:

- Advertise its own speed and duplex capabilities to the hub or switch it is connected to (the "link partner"),
- Accept notification of the link partner's capabilities,
- And to select the mode of operation that permits the highest possible data-throughput given the link partner's capabilities:
 - 100 Mbps, full-duplex
 - 100 Mbps, half-duplex
 - 10 Mbps, full-duplex
 - 10 Mbps, half-duplex

If the DM9102A device is connected to a remote system or interface that supports auto-negotiation, your system automatically selects the correct link speed and duplex mode.

If you connect the DM9102A device to a hub or switch with which the auto-negotiation protocol fails to operate successfully, you can configure the DM9102A device not to use auto-negotiation. If you do this you need to specify the speed and duplex setting for it to use (see Chapter 2 and Chapter 3).

Setting Parameters Temporarily or Permanently

This chapter describes how to configure the `dmfe` driver parameters.

This chapter contains the following sections:

- “Introduction” on page 23
- “The Order of Precedence for the Parameter Settings” on page 24
- “Setting Parameters Temporarily Using `ndd`” on page 24
- “Setting Parameters Permanently Using the `dmfe.conf` File” on page 28

Introduction

You can set the `dmfe` device driver parameters temporarily (by using `ndd`) or permanently (by editing a `dmfe.conf` file).

To set parameters for:

- A specific `dmfe` device in the system and to give it settings that remain valid only until the next system reboot, use the `ndd` utility (see “Setting Parameters Temporarily Using `ndd`” on page 24). Using `ndd` is a good way to test parameter settings.
- A specific `dmfe` device or for all `dmfe` devices in the system and to ensure that the settings remain valid after subsequent reboots, use the `dmfe.conf` file in `/platform/SUNW,UltraAX-i2/kernel/drv` (see “Setting Parameters Permanently Using the `dmfe.conf` File” on page 28.)

The Order of Precedence for the Parameter Settings

The default setting for all the `dmfe` driver's read/write parameters is 1. When `adv_autoneg_cap` is set to 1, all of the other parameter settings are ignored by the driver.

However, if you set `adv_autoneg_cap` to 0 (in other words, if you disable auto-negotiation), the driver selects the combination of speed and duplex mode that gives the highest possible throughput permitted by the other parameter settings.

So, if you enable 100Mbps full-duplex operation (`adv_100fdx_cap=1`), the driver selects this combination of speed and duplex mode in preference to 100Mbps half-duplex operation. Note that, in this case, it selects 100Mbps full-duplex operation even if the parameter permitting 100Mbps half-duplex mode is also enabled (`adv_100hdx_cap=1`) or if parameters permitting other lower levels of throughput are also enabled.

Similarly, if you disable 100Mbps full-duplex operation (`adv_100fdx_cap=0`) but enable 100Mbps half-duplex operation (`adv_100hdx_cap=1`), the driver will select 100Mbps half-duplex operation in preference to 10Mbps full-duplex operation (`adv_10fdx_cap=1`) or 10Mbps half-duplex operation (`adv_10hdx_cap=1`).

So, to force the driver to select the combination of speed and duplex mode that gives the lowest possible throughput (10Mbps half-duplex), you must not only set `adv_10hdx_cap` to 1 (its default setting), you must also set to zero all the parameters that would otherwise enable higher levels of throughput. These are: `adv_100fdx_cap`, `adv_100hdx_cap`, and `adv_10fdx_cap`.

Setting Parameters Temporarily Using `ndd`

The `ndd` utility supports any networking driver that implements the Data Link Provider Interface (DLPI).

Use the `ndd` utility to configure parameters for a specific `dmfe` device in the system with settings that you intend to remain valid only until the next system reboot.

This section tells you how you use the `ndd` utility to modify (with the `-set` option) or display (without the `-set` option) the parameters for each `dmfe` device.

Identifying Devices On the Command Line

When you use the `ndd` utility to get or set a parameter for a `dmfe` device, you must specify the device instance for the utility. The device instance is always `/dev/dmfe num` , where num is the instance number, for example, 0 or 1.

Displaying the Available Parameters Using `ndd`

1. To view the parameters you can set for a `dmfe` device, type:

```
# ndd /dev/dmfe $num$  '?'
```

Where num will be 0 or 1.

TABLE 2-1 Using `ndd` to List the Parameters for the `dmfe` Driver

```
# ndd /dev/dmfe0 '?'  
?  
link_status                (read only)  
link_speed                 (read only)  
link_mode                  (read only)  
adv_autoneg_cap            (read and write)  
adv_100fdx_cap             (read and write)  
adv_100hdx_cap             (read and write)  
adv_10fdx_cap              (read and write)  
adv_10hdx_cap              (read and write)
```

(For parameter descriptions, see Appendix A.)

Viewing the Current Setting for a Parameter

1. To display the current setting of a parameter, specify the parameter name but do not specify a new value. The syntax is as follows:

```
# ndd /dev/dmfe $num$  parameter
```

For example, to check whether auto-negotiation is currently enabled, type:

```
# ndd /dev/dmfe $num$  adv_autoneg_cap
```

The result displayed will be either 0 (which means that auto-negotiation is disabled) or 1 (which means that auto-negotiation is enabled).

Setting a New Value for a Parameter

1. **To modify a parameter value, use the `-set` option.**

The syntax is as follows:

```
% ndd -set /dev/dmfeenum parameter value
```

When you invoke the `ndd` utility with the `-set` option, the utility passes the parameter name and value down to the named `dmfe` driver instance. The driver then checks the new value and, if it is valid, assigns it to the parameter.

Specifying a Particular Speed and Duplex Setting

Note – Note that the values you set by using `ndd` remain valid only until the next system reboot.

To specify the speed and duplex mode (that is, to force the device to use a particular speed and duplex mode instead of negotiating these variables with the device it is connected to), do the following:

1. **Set one of the following parameters to 1:** `adv_100fdx_cap`, `adv_100hdx_cap`, `adv_10fdx_cap`, **or** `adv_10hdx_cap`.
2. **Set the other three parameters to zero.**
3. **Set `adv_autoneg_cap` to zero. This disables the device's auto-negotiation facility and causes the other new parameters to take effect.**

Note – When you use `ndd` to set the speed/duplex-mode parameters, the `dmfe` driver does not examine the value of these parameters until you subsequently set `adv_autoneg_cap`. This is why you must set `adv_autoneg_cap` last. In fact, for the new parameter values to take effect, you must set `adv_autoneg_cap` last even if this means setting it to the value it is already set to.

For example, to specify a network speed of 100Mbps with half-duplex operation for device `dmfe0`, you would type the following:

```
# ndd -set /dev/dmfe0 adv_100fdx_cap 0
# ndd -set /dev/dmfe0 adv_100hdx_cap 1
# ndd -set /dev/dmfe0 adv_10fdx_cap 0
# ndd -set /dev/dmfe0 adv_10hdx_cap 0
# ndd -set /dev/dmfe0 adv_autoneg_cap 0
```

If you enable more than one of the speed/duplex mode parameters (that is, if you set more than one of the parameters to a value of 1), the driver selects the combination of speed and duplex mode that allows the highest throughput.

Returning to Auto-Negotiation Mode

1. To return the device to its default operating mode (that is, to cause it to negotiate a transfer speed and duplex mode automatically with the link partner), return all the parameters to their default value of 1.

To return to auto-negotiation mode, type the following:

```
# ndd -set /dev/dmfe0 adv_100fdx_cap 1
# ndd -set /dev/dmfe0 adv_100hdx_cap 1
# ndd -set /dev/dmfe0 adv_10fdx_cap 1
# ndd -set /dev/dmfe0 adv_10hdx_cap 1
# ndd -set /dev/dmfe0 adv_autoneg_cap 1
```

For an explanation of why we recommend you to return all the parameters to their default values of 1, see “The Order of Precedence for the Parameter Settings” on page 24.

Setting Parameters Permanently Using the `dmfe.conf` File

You can specify parameters for all `dmfe` devices in a system or for specific devices by editing the `dmfe.conf` file in the `/platform/SUNW,UltraAX-i2/kernel/drv` directory. These parameters take effect after the next reboot and remain in effect across subsequent reboots.

Using `dmfe.conf` To Set Parameters for All `dmfe` Devices in a System

To configure driver parameters for all `dmfe` devices in a system by using the `dmfe.conf` file, follow the instructions in this section.

For more information, refer to the manual pages for `prtconf` (1M), `system` (4) and `driver.conf` (4).

Note – When you edit the `dmfe.conf` file, make sure you do not modify any settings other than those of the parameters specifically described in this documentation.

1. Use a text editor to open the `dmfe.conf` file in the following directory:

```
/platform/SUNW,UltraAX-i2/kernel/drv
```

2. Add a line for each parameter you want to set globally.

To force all `dmfe` devices in a system to use a speed of 100Mbps in half-duplex mode, you would make the following two entries:

```
adv_autoneg_cap=0;
adv_100fdx_cap=0;
```

The driver's default values for the speed/duplex-mode settings are all 1. This means that, in the example above, the driver will read the settings of 0 for `adv_autoneg_cap` (which disables auto-negotiation) and `adv_100fdx_cap` (which disables 100Mbps full-duplex operation). Then, because the next parameter in the order of precedence is `adv_100hdx_cap` (100Mbps half-duplex operation) and this parameter still has its default setting of 1, the driver will select 100Mbps with half-duplex operation.

For more information about the order in which the driver selects the combination of speed and duplex mode to use, see “The Order of Precedence for the Parameter Settings” on page 24.

If you wanted to force the device to use 10Mbps full-duplex mode (this is next in the driver’s order of precedence, after 100Mbps half-duplex mode) you would also add the following entry:

```
adv_100hdx_cap=0;
```

Using `dmfe.conf` to Set Parameters for a Particular Device

1. Obtain the hardware path name for the device in the device tree.

Typically this path name and the associated instance number will be found in the `/etc/path_to_inst` file. Sample entries in `/etc/path_to_inst` are:

```
"/pci@1f,0/ethernet@c" 0 "dmfe"  
"/pci@1f,0/ethernet@5" 1 "dmfe"
```

In the entries above:

- The first part within the double quotes specifies the hardware node name in the device tree.
- The path name before the last `/` character is the parent name.
- The number after the last `@` character is the unit-address.
- The number in the middle (not enclosed by double quotes) is the instance number.
- The last part in double quotes is the driver name.

You need to use these elements in Step 3 when you make your entries in the `dmfe.conf` file.

2. Use a text editor to open the `dmfe.conf` file in the following directory:

```
/platform/SUNW,UltraAX-i2/kernel/drv
```

3. Type an entry into the `dmfe.conf` file you have created.

To identify a PCI device whose parameters you intend to set use the parent name, unit-address, and driver name for the device.

Refer to the `pci(4)` man page for more information about PCI device specification.

In the first line of the sample `/etc/path_to_inst` in Step 1 above:

- Parent name = /pci@1f,0
- Unit-address = c
- Driver name = dmfe

Therefore an example of a `dmfe.conf` file in which the network speed and duplex mode for `dmfe0` only are set to 100Mbps and half duplex respectively is as follows:

```
parent="/pci@1f,0" unit-address="c" name="dmfe" adv_autoneg_cap=
0 adv_100fdx_cap=0;
```

The driver's default values for the speed/duplex-mode settings are all 1. This means that, in the example above, the driver will read the settings of 0 for `adv_autoneg_cap` (which disables auto-negotiation) and `adv_100fdx_cap` (which disables 100Mbps full-duplex operation). Then, because the next parameter in the order of precedence is `adv_100hdx_cap` (100Mbps half-duplex operation) and this parameter still has its default setting of 1, the driver will select 100Mbps half-duplex operation.

For more information about the order in which the driver selects the combination of speed and duplex mode to use, see "The Order of Precedence for the Parameter Settings" on page 24.

If you wanted to force `dmfe0` to operate at 10Mbps in full-duplex mode you would add `adv_100hdx_cap=0` to the previous example. The entry in `dmfe.conf` would then look as follows:

```
parent="/pci@1f,0" unit-address="c" name="dmfe" adv_autoneg_cap=
0 adv_100fdx_cap=0 adv_100hdx_cap=0;
```

Forcing the Network Speed and Duplex Settings for OBP If You Are Booting From the Network

This chapter tells you how to force the network speed and duplex mode for the `dmfe` device if you are booting from the network and have attached the Netra X1 or Sun Fire V100 server to an Ethernet hub that does not support auto-negotiation.

The settings you specify by following the instructions in this chapter affect OpenBoot PROM only. This means that they remain valid only during booting and do not affect the settings used when the Solaris operating environment has loaded.

For information about setting `dmfe` parameters that remain valid both during and after system reboots, see Chapter 2.

The chapter contains the following sections:

- “Forcing the Speed and Duplex Mode If You Are Booting From the Network” on page 312
- “Booting From the Network” on page 313

Note – The current driver software does not support booting from `net1`. Until a fix is available for this, please use `net0` for booting the server.

Forcing the Speed and Duplex Mode If You Are Booting From the Network

If you are booting the Netra X1 or Sun Fire V100 server from the network and you have connected it to an Ethernet hub that does not support auto-negotiation, then follow the instructions below to force the DM9102A device to use the same network speed and/or duplex mode as the hub.

Note – The instructions in this section affect OBP (OpenBoot PROM) only. When the Solaris operating environment loads, it does not inherit any `dmfe` driver settings from OBP.

1. Type:

```
ok nvedit
```

2. If you have not used `nvedit` before on the system you are configuring, the first line you edit will be numbered '0':

(If you have used `nvedit` before and existing entries are displayed, press Control-N until you reach an empty line.)

3. Type the following, pressing the Return key at the end of the line :

```
0: apply transfer-speed=speed netnum
1: apply duplex-mode=mode netnum
```

where `speed` is either 10 or 100 (depending on the speed you want to specify), `mode` is either half or full, and `num` is either 0 or 1 (depending on which network port you are using).

For example, to force `net0` to operate at 10Mbps in half-duplex mode, type:

```
0: apply transfer-speed=10 net0
1: apply duplex-mode=half net0
```

1. If you need to set the network speed and/or duplex mode for `net1`, repeat Step 3.

However, remember that you cannot currently use `net1` for booting the server (see the Note at the start of this chapter).

2. Press Control-C.

3. At the `ok` prompt type:

```
ok nvstore
ok setenv use-nvramrc? true
```

4. Reset your system by typing:

```
ok reset-all
```

Booting From the Network

1. To boot from the network, at the `ok` prompt type:

```
ok boot netnum
```

where *num* is either 0 or 1 depending on the label (*net0* or *net1*) of the DM9102A device you are using to boot (the label is visible close to the port on the back panel of the server). However, see the Note below.

Note – The current driver software does not support booting from `net1`. Until a fix is available for this, please use `net0` for booting the server.

Parameter Definitions

This appendix lists the parameters for the `dmfe` driver. For information about using these parameters, see Chapter 2.

Driver Parameter Values and Definitions

The following sections describe the `dmfe` driver parameters. The parameters are listed in the following table.

TABLE A-1 `dmfe` Driver Parameters

Parameter	Configurability	Description
<code>link_status</code>	Read only	Shows the current link status
<code>link_speed</code>	Read only	Shows the current link speed
<code>link_mode</code>	Read only	Shows the current duplex mode
<code>adv_autoneg_cap</code>	Read and write	Operational mode parameter
<code>adv_100fdx_cap</code>	Read and write	Operational mode parameter
<code>adv_100hdx_cap</code>	Read and write	Operational mode parameter
<code>adv_10fdx_cap</code>	Read and write	Operational mode parameter
<code>adv_10hdx_cap</code>	Read and write	Operational mode parameter

Inspecting the Current Status of the Device

The read-only parameters described in the following table report the status, network speed, and duplex mode used by the device.

TABLE A-2 Read-Only Parameters That Report the Link Status, Speed, and Mode

Parameter	Notes	Values
link_status	Current link status	1 = Link up 0 = Link down
link_speed	Valid only if the link is up	100 = 100 Mbps 10 = 10 Mbps
link_mode	Valid only if the link is up	1 = Full duplex 0 = Half duplex

Operational Mode Parameters

The following table describes the operational mode parameters and their default values.

TABLE A-3 Operational Mode Parameters

Parameter	Description	Values
adv_autoneg_cap	Local transceiver capability advertised by the hardware	1 = Auto-negotiation enabled (default) 0 = Auto-negotiation disabled
adv_100fdx_cap	Local transceiver capability advertised by the hardware	1 = 100 Mbps full-duplex (default) 0 = Not 100 Mbps full-duplex capable

TABLE A-3 Operational Mode Parameters (*Continued*)

Parameter	Description	Values
adv_100hdx_cap	Local transceiver capability advertised by the hardware	1 = 100 Mbps half-duplex (default) 0 = Not 100 Mbps half-duplex capable
adv_10fdx_cap	Local transceiver capability advertised by the hardware	1 = 10 Mbit/sec full-duplex (default) 0 = Not 10 Mbps full-duplex capable
adv_10hdx_cap	Local transceiver capability advertised by the hardware	1 = 10 Mbps half-duplex (default) 0 = Not 10 Mbps half-duplex capable

Note – The priority (in descending order) for the: adv_100fdx_cap, adv_100hdx_cap, adv_10fdx_cap, and the adv_10hdx_cap parameters is: adv_100fdx_cap, adv_100hdx_cap, adv_10fdx_cap, adv_10hdx_cap.

Application Programming Interface

The cloning character special device `/dev/dmfe` can be used to access all Davicom DM9102A devices installed in the system. Specific instances can be accessed via the device `/dev/dmfePPA` (where *PPA* stands for Physical Point of Attachment and is effectively the device instance number).

The `dmfe` driver depends on `/kernel/misc/gld`, a loadable kernel module that provides the `dmfe` driver with the DLPI and STREAMS functionality required of a LAN driver. See `gld(7D)` for more details on the primitives supported by the driver.

Where you open the clone device `/dev/dmfe`, you must use an explicit `DL_ATTACH_REQ` message to associate the opened stream with a particular device (PPA). The PPA ID is interpreted as an unsigned integer data type and indicates the corresponding device instance (unit) number. The driver returns an error (`DL_ERROR_ACK`) if the PPA field value does not correspond to a valid device instance number for this system. The device is initialized on first attach and de-initialized (stopped) at last detach.

The values returned by the driver in the `DL_INFO_ACK` primitive in response to `DL_INFO_REQ` are shown below.

- The maximum SDU is 1500 (`ETHERMTU`, defined in `<sys/ethernet.h>`).
- The minimum SDU is 0.
- The DLSAP address length is 8.
- The MAC type is `DL_ETHER`.
- The sap length value is -2, meaning the physical address component is followed immediately by a 2-byte sap component within the DLSAP address.
- The broadcast address value is the Ethernet/IEEE broadcast address (`FF:FF:FF:FF:FF:FF`).

Once in the `DL_ATTACHED` state, send a `DL_BIND_REQ` to associate a particular Service Access Point (SAP) with the stream.

