



Sun StorEdge 2G FC PCI Single Channel Network Adapter Installation Guide

Sun Microsystems, Inc.
4150 Network Circle
Santa Clara, CA 95054 U.S.A.
650-960-1300

Part No. 816-4999-10
May 2002, Revision A

Send comments about this document to: docfeedback@sun.com

Copyright 2002 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303-4900 USA. All rights reserved.

This product or document is protected by copyright and distributed under licenses restricting its use, copying, distribution, and decompilation. No part of this product or document may be reproduced in any form by any means without prior written authorization of Sun and its licensors, if any. Third-party software, including font technology, is copyrighted and licensed from Sun suppliers.

Parts of the product may be derived from Berkeley BSD systems, licensed from the University of California. UNIX is a registered trademark in the U.S. and other countries, exclusively licensed through X/Open Company, Ltd. For Netscape Communicator™, the following notice applies: Copyright 1995 Netscape Communications Corporation. All rights reserved.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Enterprise, SunVTS, StorEdge, and Solaris are trademarks, registered trademarks, or service marks of Sun Microsystems, Inc. in the U.S. and other countries. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. in the U.S. and other countries. Products bearing SPARC trademarks are based upon an architecture developed by Sun Microsystems, Inc.

The OPEN LOOK and Sun™ Graphical User Interface was developed by Sun Microsystems, Inc. for its users and licensees. Sun acknowledges the pioneering efforts of Xerox in researching and developing the concept of visual or graphical user interfaces for the computer industry. Sun holds a non-exclusive license from Xerox to the Xerox Graphical User Interface, which license also covers Sun's licensees who implement OPEN LOOK GUIs and otherwise comply with Sun's written license agreements.

RESTRICTED RIGHTS: Use, duplication, or disclosure by the U.S. Government is subject to restrictions of FAR 52.227-14(g)(2)(6/87) and FAR 52.227-19(6/87), or DFAR 252.227-7015(b)(6/95) and DFAR 227.7202-3(a).

DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT, ARE DISCLAIMED, EXCEPT TO THE EXTENT THAT SUCH DISCLAIMERS ARE HELD TO BE LEGALLY INVALID.

Copyright 2002 Sun Microsystems, Inc., 901 San Antonio Road • Palo Alto, CA 94303-4900 Etats-Unis. Tous droits réservés.

Ce produit ou document est protégé par un copyright et distribué avec des licences qui en restreignent l'utilisation, la copie, la distribution, et la décompilation. Aucune partie de ce produit ou document ne peut être reproduite sous aucune forme, par quelque moyen que ce soit, sans l'autorisation préalable et écrite de Sun et de ses bailleurs de licence, s'il y en a. Le logiciel détenu par des tiers, et qui comprend la technologie relative aux polices de caractères, est protégé par un copyright et licencié par des fournisseurs de Sun.

Des parties de ce produit pourront être dérivées des systèmes Berkeley BSD licenciés par l'Université de Californie. UNIX est une marque déposée aux Etats-Unis et dans d'autres pays et licenciée exclusivement par X/Open Company, Ltd. La notice suivante est applicable à Netscape Communicator™: Copyright 1995 Netscape Communications Corporation. Tous droits réservés.

Sun, Sun Microsystems, the Sun logo, AnswerBook2, docs.sun.com, Sun Enterprise, SunVTS, StorEdge, et Solaris sont des marques de fabrique ou des marques déposées, ou marques de service, de Sun Microsystems, Inc. aux Etats-Unis et dans d'autres pays. Toutes les marques SPARC sont utilisées sous licence et sont des marques de fabrique ou des marques déposées de SPARC International, Inc. aux Etats-Unis et dans d'autres pays. Les produits portant les marques SPARC sont basés sur une architecture développée par Sun Microsystems, Inc.

L'interface d'utilisation graphique OPEN LOOK et Sun™ a été développée par Sun Microsystems, Inc. pour ses utilisateurs et licenciés. Sun reconnaît les efforts de pionniers de Xerox pour la recherche et le développement du concept des interfaces d'utilisation visuelle ou graphique pour l'industrie de l'informatique. Sun détient une licence non exclusive de Xerox sur l'interface d'utilisation graphique Xerox, cette licence couvrant également les licenciés de Sun qui mettent en place l'interface d'utilisation graphique OPEN LOOK et qui en outre se conforment aux licences écrites de Sun.

CETTE PUBLICATION EST FOURNIE "EN L'ETAT" ET AUCUNE GARANTIE, EXPRESSE OU IMPLICITE, N'EST ACCORDEE, Y COMPRIS DES GARANTIES CONCERNANT LA VALEUR MARCHANDE, L'APTITUDE DE LA PUBLICATION A REPONDRE A UNE UTILISATION PARTICULIERE, OU LE FAIT QU'ELLE NE SOIT PAS CONTREFAISANTE DE PRODUIT DE TIERS. CE DENI DE GARANTIE NE S'APPLIQUERAIT PAS, DANS LA MESURE OU IL SERAIT TENU JURIDIQUEMENT NUL ET NON AVENU.



Contents

- 1. Regulatory Compliance Statements 0-v**
- 2. Safety Agency Compliance Statements 0-ix**
 - Preface 3**
 - Using UNIX Commands 3
 - Typographic Conventions 4
 - Shell Prompts 4
 - Related Documentation 5
 - Accessing Sun Documentation Online 5
 - Sun Welcomes Your Comments 5
- 3. Installation 1-1**
 - 1.1 Software Requirements 1-1
 - 1.1.1 Device Drivers 1-1
 - 1.2 Tools and Equipment Needed 1-2
 - 1.3 Preparing for Installation 1-2
 - 1.3.1 Sun Enterprise Systems 1-2
 - 1.3.2 Preparing for a Sun StorEdge A5x00 Installation 1-3
 - 1.4 Installing the Network Adapter 1-6
 - 1.5 Testing the Installation 1-10

- 1.5.1 SunVTS 1-10
- 1.5.2 Testing Procedure 1-10

A. Specifications 5-1

- A.1 PCI Card 5-1
- A.2 Fibre Channel Interface Specifications 5-1
- A.3 Performance Specifications 5-2
- A.4 Power Requirements 5-3
- A.5 Physical Dimensions 5-3
- A.6 Regulatory Compliance 5-4
- A.7 PCI-X Edge Connector Pin Definitions:
32-Bit Cards 5-5
- A.8 PCI-X Edge Connector Pin Definitions:
64-Bit Cards 5-7

B. Booting From the Network Adapter 6-1

- B.1 The Net Install Method 6-2
 - B.1.1 Overview For the Net Install Method 6-2
 - B.1.2 To Set Up the Boot/Install Server 6-3
 - B.1.3 To Modify the Boot Image 6-5
 - B.1.4 To Set Up the Client 6-6
- B.2 The Dump and Restore Method 6-8
 - B.2.1 Overview Of the Dump and Restore Method 6-8
 - B.2.2 Partitioning the New Boot Disk the Same As the Temporary Boot Disk 6-8
 - B.2.3 To Create File Systems on the New Boot Disk 6-18
 - B.2.4 To Create the New Boot Files 6-18

Regulatory Compliance Statements

Your Sun product is marked to indicate its compliance class:

- Federal Communications Commission (FCC) — USA
- Industry Canada Equipment Standard for Digital Equipment (ICES-003) - Canada
- Voluntary Control Council for Interference (VCCI) — Japan
- Bureau of Standards Metrology and Inspection (BSMI) — Taiwan

Please read the appropriate section that corresponds to the marking on your Sun product before attempting to install the product.

FCC Class A Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy, and if it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Shielded Cables: Connections between the workstation and peripherals must be made using shielded cables to comply with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted-pair (UTP) cables.

Modifications: Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

FCC Class B Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Shielded Cables: Connections between the workstation and peripherals must be made using shielded cables in order to maintain compliance with FCC radio frequency emission limits. Networking connections can be made using unshielded twisted pair (UTP) cables.

Modifications: Any modifications made to this device that are not approved by Sun Microsystems, Inc. may void the authority granted to the user by the FCC to operate this equipment.

ICES-003 Class A Notice - Avis NMB-003, Classe A

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

ICES-003 Class B Notice - Avis NMB-003, Classe B

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

VCCI 基準について

クラス A VCCI 基準について

クラス A VCCI の表示があるワークステーションおよびオプション製品は、クラスA情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

クラス B VCCI 基準について

クラス B VCCI の表示  があるワークステーションおよびオプション製品は、クラスB情報技術装置です。これらの製品には、下記の項目が該当します。

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをしてください。

This page is intentionally left blank.

This page is intentionally left blank.

Safety Agency Compliance Statements

Read this section before beginning any procedure. The following text provides safety precautions to follow when installing a Sun Microsystems product.

Safety Precautions

For your protection, observe the following safety precautions when setting up your equipment:

- Follow all cautions and instructions marked on the equipment.
- Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the equipment's electrical rating label.
- Never push objects of any kind through openings in the equipment. Dangerous voltages may be present. Conductive foreign objects could produce a short circuit that could cause fire, electric shock, or damage to your equipment.

Symbols

The following symbols may appear in this book:



Caution – There is risk of personal injury and equipment damage. Follow the instructions.



Caution – Hot surface. Avoid contact. Surfaces are hot and may cause personal injury if touched.



Caution – Hazardous voltages are present. To reduce the risk of electric shock and danger to personal health, follow the instructions.

On – Applies AC power to the system.

Depending on the type of power switch your device has, one of the following symbols may be used:



Off - Removes AC power from the system.



Standby – The On/Standby switch is in the standby position.

Modifications to Equipment

Do not make mechanical or electrical modifications to the equipment. Sun Microsystems is not responsible for regulatory compliance of a modified Sun product.

Placement of a Sun Product



Caution – Do not block or cover the openings of your Sun product. Never place a Sun product near a radiator or heat register. Failure to follow these guidelines can cause overheating and affect the reliability of your Sun product.



Caution – The workplace-dependent noise level defined in DIN 45 635 Part 1000 must be 70Db(A) or less.

SELV Compliance

Safety status of I/O connections comply to SELV requirements.

Power Cord Connection



Caution – Sun products are designed to work with single-phase power systems having a grounded neutral conductor. To reduce the risk of electric shock, do not plug Sun products into any other type of power system. Contact your facilities manager or a qualified electrician if you are not sure what type of power is supplied to your building.



Caution – Not all power cords have the same current ratings. Household extension cords do not have overload protection and are not meant for use with computer systems. Do not use household extension cords with your Sun product.



Caution – Your Sun product is shipped with a grounding type (three-wire) power cord. To reduce the risk of electric shock, always plug the cord into a grounded power outlet.

The following caution applies only to devices with a Standby power switch:



Caution – The power switch of this product functions as a standby type device only. The power cord serves as the primary disconnect device for the system. Be sure to plug the power cord into a grounded power outlet that is nearby the system and is readily accessible. Do not connect the power cord when the power supply has been removed from the system chassis.

Lithium Battery



Caution – On Sun CPU boards, there is a lithium battery molded into the real-time clock, SGS No. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, or MK48T08. Batteries are not customer replaceable parts. They may explode if mishandled. Do not dispose of the battery in fire. Do not disassemble it or attempt to recharge it.

Battery Pack



Caution – There is a sealed lead acid battery in Sun StorEdge 2G FC PCI Single Channel Network Adapter Installation Guide units. Portable Energy Products No. TLC02V50. There is danger of explosion if the battery pack is mishandled or incorrectly replaced. Replace only with the same type of Sun Microsystems battery pack. Do not disassemble it or attempt to recharge it outside the system. Do not dispose of the battery in fire. Dispose of the battery properly in accordance with local regulations.

System Unit Cover

You must remove the cover of your Sun computer system unit to add cards, memory, or internal storage devices. Be sure to replace the top cover before powering on your computer system.



Caution – Do not operate Sun products without the top cover in place. Failure to take this precaution may result in personal injury and system damage.

Laser Compliance Notice

Sun products that use laser technology comply with Class 1 laser requirements.

Class 1 Laser Product
Luokan 1 Laserlaite
Klasse 1 Laser Apparat
Laser Klasse 1



Achtung – Gefahr von Verletzung und Geräteschaden. Befolgen Sie die Anweisungen.



Achtung – Hohe Temperatur. Nicht berühren, da Verletzungsgefahr durch heiße Oberfläche besteht.



Achtung – Gefährliche Spannungen. Anweisungen befolgen, um Stromschläge und Verletzungen zu vermeiden.

Ein – Setzt das System unter Wechselstrom.

Je nach Netzschatertyp an Ihrem Gerät kann eines der folgenden Symbole benutzt werden:



Aus – Unterbricht die Wechselstromzufuhr zum Gerät.



Wartezustand (Stand-by-Position) - Der Ein-/Wartezustand-Schalter steht auf Wartezustand. Änderungen an Sun-Geräten.

Nehmen Sie keine mechanischen oder elektrischen Änderungen an den Geräten vor. Sun Microsystems, übernimmt bei einem Sun-Produkt, das geändert wurde, keine Verantwortung für die Einhaltung behördlicher Vorschriften

Einhaltung sicherheitsbehördlicher Vorschriften

Auf dieser Seite werden Sicherheitsrichtlinien beschrieben, die bei der Installation von Sun-Produkten zu beachten sind.

Sicherheitsvorkehrungen

Treffen Sie zu Ihrem eigenen Schutz die folgenden Sicherheitsvorkehrungen, wenn Sie Ihr Gerät installieren:

- Beachten Sie alle auf den Geräten angebrachten Warnhinweise und Anweisungen.
- Vergewissern Sie sich, daß Spannung und Frequenz Ihrer Stromquelle mit der Spannung und Frequenz übereinstimmen, die auf dem Etikett mit den elektrischen Nennwerten des Geräts angegeben sind.
- Stecken Sie auf keinen Fall irgendwelche Gegenstände in Öffnungen in den Geräten. Leitfähige Gegenstände könnten aufgrund der möglicherweise vorliegenden gefährlichen Spannungen einen Kurzschluß verursachen, der einen Brand, Stromschlag oder Geräteschaden herbeiführen kann.

Symbole

Die Symbole in diesem Handbuch haben folgende Bedeutung:

Aufstellung von Sun-Geräten



Achtung – Um den zuverlässigen Betrieb Ihres Sun-Geräts zu gewährleisten und es vor Überhitzung zu schützen, dürfen die Öffnungen im Gerät nicht blockiert oder verdeckt werden. Sun-Produkte sollten niemals in der Nähe von Heizkörpern oder Heizluftklappen aufgestellt werden.



Achtung – Der arbeitsplatzbezogene Schalldruckpegel nach DIN 45 635 Teil 1000 beträgt 70Db(A) oder weniger.

Einhaltung der SELV-Richtlinien

Die Sicherung der I/O-Verbindungen entspricht den Anforderungen der SELV-Spezifikation.

Anschluß des Netzkabels



Achtung – Sun-Produkte sind für den Betrieb an Einphasen-Stromnetzen mit geerdetem Nulleiter vorgesehen. Um die Stromschlaggefahr zu reduzieren, schließen Sie Sun-Produkte nicht an andere Stromquellen an. Ihr Betriebsleiter oder ein qualifizierter Elektriker kann Ihnen die Daten zur Stromversorgung in Ihrem Gebäude geben.



Achtung – Nicht alle Netzkabel haben die gleichen Nennwerte. Herkömmliche, im Haushalt verwendete Verlängerungskabel besitzen keinen Überlastungsschutz und sind daher für Computersysteme nicht geeignet.



Achtung – Ihr Sun-Gerät wird mit einem dreiadrigem Netzkabel für geerdete Netzsteckdosen geliefert. Um die Gefahr eines Stromschlags zu reduzieren, schließen Sie das Kabel nur an eine fachgerecht verlegte, geerdete Steckdose an.

Die folgende Warnung gilt nur für Geräte mit Wartezustand-Netzschalter:



Achtung – Der Ein/Aus-Schalter dieses Geräts schaltet nur auf Wartezustand (Stand-By-Modus). Um die Stromzufuhr zum Gerät vollständig zu unterbrechen, müssen Sie das Netzkabel von der Steckdose abziehen. Schließen Sie den Stecker des Netzkabels an eine in der Nähe befindliche, frei zugängliche, geerdete Netzsteckdose an. Schließen Sie das Netzkabel nicht an, wenn das Netzteil aus der Systemeinheit entfernt wurde.

Lithiumbatterie



Achtung – CPU-Karten von Sun verfügen über eine Echtzeituhr mit integrierter Lithiumbatterie (Teile-Nr. MK48T59Y, MK48TXXB-XX, MK48T18-XXXPCZ, M48T59W-XXXPCZ, oder MK48T08). Diese Batterie darf nur von einem qualifizierten Servicetechniker ausgetauscht werden, da sie bei falscher Handhabung explodieren kann. Werfen Sie die Batterie nicht ins Feuer. Versuchen Sie auf keinen Fall, die Batterie auszubauen oder wieder aufzuladen.

Batterien



Achtung – Die Geräte Sun StorEdge 2G FC PCI Single Channel Network Adapter Installation Guide enthalten auslaufsichere Bleiakkumulatoren. Produkt-Nr. TLC02V50 für portable Stromversorgung. Werden bei der Behandlung oder beim Austausch der Batterie Fehler gemacht, besteht Explosionsgefahr. Batterie nur gegen Batterien gleichen Typs von Sun Microsystems austauschen. Nicht demontieren und nicht versuchen, die Batterie außerhalb des Geräts zu laden. Batterie nicht ins Feuer werfen. Ordnungsgemäß entsprechend den vor Ort geltenden Vorschriften entsorgen.

Gehäuseabdeckung


Sie müssen die obere Abdeckung Ihres Sun-Systems entfernen, um interne Komponenten wie Karten, Speicherchips oder Massenspeicher hinzuzufügen. Bringen Sie die obere Gehäuseabdeckung wieder an, bevor Sie Ihr System einschalten.



Achtung – Bei Betrieb des Systems ohne obere Abdeckung besteht die Gefahr von Stromschlag und Systemschäden.

Einhaltung der Richtlinien für Laser

Sun-Produkte, die mit Laser-Technologie arbeiten, entsprechen den Anforderungen der Laser Klasse 1.

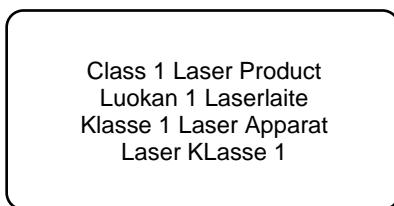

CD-ROM



Warnung – Die Verwendung von anderen Steuerungen und Einstellungen oder die Durchfhrung von Prozeduren, die von den hier beschriebenen abweichen, knnen gefhrliche Strahlungen zur Folge haben.

Conformité aux normes de sécurité

Ce texte traite des mesures de sécurité qu'il convient de prendre pour l'installation d'un produit Sun Microsystems.

Mesures de sécurité

Pour votre protection, veuillez prendre les précautions suivantes pendant l'installation du matériel :

- Suivre tous les avertissements et toutes les instructions inscrites sur le matériel.
- Vérifier que la tension et la fréquence de la source d'alimentation électrique correspondent à la tension et à la fréquence indiquées sur l'étiquette de classification de l'appareil.

- Ne jamais introduire d'objets quels qu'ils soient dans une des ouvertures de l'appareil. Vous pourriez vous trouver en présence de hautes tensions dangereuses. Tout objet conducteur introduit de la sorte pourrait produire un court-circuit qui entraînerait des flammes, des risques d'électrocution ou des dégâts matériels.

Symboles

Vous trouverez ci-dessous la signification des différents symboles utilisés :



Attention: – risques de blessures corporelles et de dégâts matériels. Veuillez suivre les instructions.



Attention: – surface à température élevée. Evitez le contact. La température des surfaces est élevée et leur contact peut provoquer des blessures corporelles.



Attention: – présence de tensions dangereuses. Pour éviter les risques d'électrocution et de danger pour la santé physique, veuillez suivre les instructions.



MARCHE – Votre système est sous tension (courant alternatif).



ARRET - Votre système est hors tension (courant alternatif).



VEILLEUSE – L'interrupteur Marche/Veilleuse est en position « Veilleuse ».

Modification du matériel

Ne pas apporter de modification mécanique ou électrique au matériel. Sun Microsystems n'est pas responsable de la conformité réglementaire d'un produit Sun qui a été modifié.



Attention: – tous les cordons d'alimentation n'ont pas forcément la même puissance nominale en matière de courant. Les rallonges d'usage domestique n'offrent pas de protection contre les surcharges et ne sont pas prévues pour les systèmes d'ordinateurs. Ne pas utiliser de rallonge d'usage domestique avec votre produit Sun.

Positionnement d'un produit Sun



Attention: – pour assurer le bon fonctionnement de votre produit Sun et pour l'empêcher de surchauffer, il convient de ne pas obstruer ni recouvrir les ouvertures prévues dans l'appareil. Un produit Sun ne doit jamais être placé à proximité d'un radiateur ou d'une source de chaleur.



Attention: – votre produit Sun a été livré équipé d'un cordon d'alimentation à trois fils (avec prise de terre). Pour écarter tout risque d'électrocution, branchez toujours ce cordon dans une prise mise à la terre.



Attention: – Le niveau de pression acoustique au poste de travail s'élève selon la norme DIN 45 635 section 1000, à 70 dB (A) ou moins.

Conformité SELV

Sécurité : les raccordements E/S sont conformes aux normes SELV.



Attention: – le commutateur d'alimentation de ce produit fonctionne comme un dispositif de mise en veille uniquement. C'est la prise d'alimentation qui sert à mettre le produit hors tension. Veillez donc à installer le produit à proximité d'une prise murale facilement accessible. Ne connectez pas la prise d'alimentation lorsque le châssis du système n'est plus alimenté.



Attention: – les produits Sun sont conçus pour fonctionner avec des alimentations monophasées munies d'un conducteur neutre mis à la terre. Pour écarter les risques d'électrocution, ne pas brancher de produit Sun dans un autre type d'alimentation secteur. En cas de doute quant au type d'alimentation électrique du local, veuillez vous adresser au directeur de l'exploitation ou à un électricien qualifié.

Couvercle

Pour ajouter des cartes, de la mémoire, ou des unités de stockage internes, vous devrez démonter le couvercle de l'unité système Sun. Ne pas oublier de remettre ce couvercle en place avant de mettre le système sous tension.



Attention: – il est dangereux de faire fonctionner un produit Sun sans le couvercle en place. Si l'on néglige cette précaution, on encourt des risques de blessures corporelles et de dégâts matériels.

Conformité aux certifications Laser

Les produits Sun qui font appel aux technologies lasers sont conformes aux normes de la classe 1 en la matière.

Class 1 Laser Product
Luokan 1 Laserlaite
Klasse 1 Laser Apparat
Laser KLasse 1

Normativas de seguridad

El siguiente texto incluye las medidas de seguridad que se deben seguir cuando se instale algún producto de Sun Microsystems.

Precauciones de seguridad

Para su protección observe las siguientes medidas de seguridad cuando manipule su equipo:

- Siga todas los avisos e instrucciones marcados en el equipo.
- Asegúrese de que el voltaje y la frecuencia de la red eléctrica concuerden con las descritas en las etiquetas de especificaciones eléctricas del equipo.
- No introduzca nunca objetos de ningún tipo a través de los orificios del equipo. Pueden haber voltajes peligrosos. Los objetos extraños conductores de la electricidad pueden producir cortocircuitos que provoquen un incendio, descargas eléctricas o daños en el equipo.

Símbolos

En este libro aparecen los siguientes símbolos:



Precaución – Existe el riesgo de lesiones personales y daños al equipo. Siga las instrucciones.



Precaución – Superficie caliente. Evite el contacto. Las superficies están calientes y pueden causar daños personales si se tocan.



Precaución – Voltaje peligroso presente. Para reducir el riesgo de descarga y daños para la salud siga las instrucciones.

Encendido – Aplica la alimentación de CA al sistema.

Según el tipo de interruptor de encendido que su equipo tenga, es posible que se utilice uno de los siguientes símbolos:



Apagado - Elimina la alimentación de CA del sistema.



En espera – El interruptor de Encendido/En espera se ha colocado en la posición de En espera.

Modificaciones en el equipo

No realice modificaciones de tipo mecánico o eléctrico en el equipo. Sun Microsystems no se hace responsable del cumplimiento de las normativas de seguridad en los equipos Sun modificados.

Ubicación de un producto Sun



Precaución – Para asegurar la fiabilidad de funcionamiento de su producto Sun y para protegerlo de sobrecalentamientos no deben obstruirse o taparse las rejillas del equipo. Los productos Sun nunca deben situarse cerca de radiadores o de fuentes de calor.



Precaución – De acuerdo con la norma DIN 45 635, Parte 1000, se admite un nivel de presión acústica para puestos de trabajo máximo de 70Db(A).

Cumplimiento de la normativa SELV

El estado de la seguridad de las conexiones de entrada/salida cumple los requisitos de la normativa SELV.

Conexión del cable de alimentación eléctrica



Precaución – Los productos Sun están diseñados para trabajar en una red eléctrica monofásica con toma de tierra. Para reducir el riesgo de descarga eléctrica, no conecte los productos Sun a otro tipo de sistema de alimentación eléctrica. Póngase en contacto con el responsable de mantenimiento o con un electricista cualificado si no está seguro del sistema de alimentación eléctrica del que se dispone en su edificio.



Precaución – No todos los cables de alimentación eléctrica tienen la misma capacidad. Los cables de tipo doméstico no están provistos de protecciones contra sobrecargas y por tanto no son apropiados para su uso con computadores. No utilice alargadores de tipo doméstico para conectar sus productos Sun.



Precaución – Con el producto Sun se proporciona un cable de alimentación con toma de tierra. Para reducir el riesgo de descargas eléctricas conéctelo siempre a un enchufe con toma de tierra.

La siguiente advertencia se aplica solamente a equipos con un interruptor de encendido que tenga una posición "En espera":



Precavación – El interruptor de encendido de este producto funciona exclusivamente como un dispositivo de puesta en espera. El enchufe de la fuente de alimentación está diseñado para ser el elemento primario de desconexión del equipo. El equipo debe instalarse cerca del enchufe de forma que este último pueda ser fácil y rápidamente accesible. No conecte el cable de alimentación cuando se ha retirado la fuente de alimentación del chasis del sistema.

internos. Asegúrese de cerrar la tapa superior antes de volver a encender el equipo.




Precavación – Es peligroso hacer funcionar los productos Sun sin la tapa superior colocada. El hecho de no tener en cuenta esta precaución puede ocasionar daños personales o perjudicar el funcionamiento del equipo.

Aviso de cumplimiento con requisitos de láser

Los productos Sun que utilizan la tecnología de láser cumplen con los requisitos de láser de Clase 1.

Class 1 Laser Product
Luokan 1 Laserlaite
Klasse 1 Laser Apparat
Laser Klasse 1

GOST-R Certification Mark

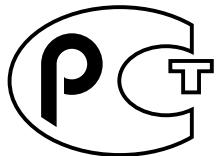

D33012

Tapa de la unidad del sistema

Debe quitar la tapa del sistema cuando sea necesario añadir tarjetas, memoria o dispositivos de almacenamiento

This page is intentionally left blank.

Declaration of Conformity

Compliance Model Number: Amber2
Product Family Name: 2G PCI Single FC Network Adapter (X6767A)

EMC

USA - FCC Class B

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This equipment may not cause harmful interference.
- 2) This equipment must accept any interference that may cause undesired operation.

European Union

This equipment complies with the following requirements of the EMC Directive 89/336/EEC:

As Telecommunication Network Equipment (TNE) in both Telecom and Other Than Telecom Centers per:

EN300-386 V.1.3.1 (09-2001) Required Limits (as applicable):

EN55022/CISPR22	Class B
EN61000-3-2	Pass
EN61000-3-3	Pass
EN61000-4-2	6 kV (Direct), 8 kV (Air)
EN61000-4-3	3 V/m 80-1000MHz, 10 V/m 800-960 MHz and 1400-2000 MHz
EN61000-4-4	1 kV AC and DC Power Lines, 0.5 kV Signal Lines
EN61000-4-5	2 kV AC Line-Gnd, 1 kV AC Line-Line and Outdoor Signal Lines, 0.5 kV Indoor Signal Lines > 10m.
EN61000-4-6	3 V
EN61000-4-11	Pass

As Information Technology Equipment (ITE) Class B per:

EN55022:1998/CISPR22:1997 Class B

EN55024:1998 Required Limits (as applicable):

EN61000-4-2	4 kV (Direct), 8 kV (Air)
EN61000-4-3	3 V/m
EN61000-4-4	1 kV AC Power Lines, 0.5 kV Signal and DC Power Lines
EN61000-4-5	1 kV AC Line-Line and Outdoor Signal Lines, 2 kV AC Line-Gnd, 0.5 kV DC Power Lines
EN61000-4-6	3 V
EN61000-4-8	1 A/m
EN61000-4-11	Pass

EN61000-3-2:1995 + A1, A2, A14 Pass

EN61000-3-3:1995 Pass

Safety

This equipment complies with the following requirements of Low Voltage Directive 73/23/EEC.

Supplementary Information: This product was tested and complies with all the requirements for the CE Mark.

/S/

/S/

Dennis P. Symanski
Manager, Compliance Engineering
Sun Microsystems, Inc.
901 San Antonio Road, MPK15-102
Palo Alto, CA 94303-4900, USA
Tel: 650-786-3255
Fax: 650-786-3723

DATE

Fraser Marshall
Quality Process Manager
Sun Microsystems Scotland, Limited
Springfield, Linlithgow,
West Lothian, EH49 7LR
Scotland, United Kingdom
Tel: +44 1 506 672 606

DATE

Fax: +44 1 506 670 400

Preface

The *Sun StorEdge™ 2G FC PCI Single Channel Network Adapter Installation Guide* describes how to install the Sun StorEdge 2G FC PCI Single Channel Network Adapter card. These instructions are designed for an experienced system administrator or trained service provider.

Using UNIX Commands

This document may not contain information on basic UNIX® commands and procedures such as shutting down the system, booting the system, and configuring devices.

See one or more of the following for this information:

- *Solaris Handbook for Sun Peripherals*
- AnswerBook™ online documentation for the Solaris™ software environment
- Other software documentation that you received with your system

Typographic Conventions

Typeface	Meaning	Examples
AaBbCc123	The names of commands, files, and directories; on-screen computer output	Edit your .login file. Use ls -a to list all files. % You have mail.
AaBbCc123	What you type, when contrasted with on-screen computer output	% su Password:
AaBbCc123	Book titles, new words or terms, words to be emphasized	Read Chapter 6 in the <i>User's Guide</i> . These are called <i>class</i> options. You <i>must</i> be superuser to do this.
	Command-line variable; replace with a real name or value	To delete a file, type rm <i>filename</i> .

Shell Prompts

Shell	Prompt
C shell	<i>machine_name</i> %
C shell superuser	<i>machine_name</i> #
Bourne shell and Korn shell	\$
Bourne shell and Korn shell superuser	#

Related Documentation

Application	Title	Part Number
Diagnostic Testing	<i>SunVTS 4.5 User's Guide</i>	816-1575
	<i>SunVTS 4.5 Test Reference Manual</i>	816-1576
Sun Enterprise™ Systems	PCI I/O Board Installation and Component Replacement	805-1372
Sun StorEdge Disk Arrays	<i>Sun StorEdge A5000 Hardware Configuration Guide</i>	805-0264

Accessing Sun Documentation Online

A broad selection of Sun system documentation is located at:

<http://www.sun.com/products-n-solutions/hardware/docs>

A complete set of Solaris documentation and many other titles are located at:

<http://docs.sun.com>

Sun Welcomes Your Comments

Sun is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Sun at:

docfeedback@sun.com

Please include the part number of your document in the subject line of your email.

Installation

The *Sun StorEdge 2G FC PCI Single Channel Network Adapter Installation Guide* describes how to install the Sun StorEdge 2G FC PCI Single Channel Network Adapter card in a system. These instructions are designed for an experienced system administrator or trained service provider.

1.1 Software Requirements

1.1.1 Device Drivers

The minimum Solaris™ operating environment releases to support the device drivers for the Sun StorEdge 2G FC PCI Single Channel Network Adapter is Solaris 8 10/01 update 6.

All of the drivers are unbundled with Solaris 8. See the *Sun StorEdge 2G FC PCI Single Channel Network Adapter Product Notes* for a list of the required driver packages and patches and instructions for downloading them.

Note – If the required packages and patches are not installed, you can not use the network adapter.

- Once installed, Sun StorEdge 2G FC PCI Single Channel Network Adapter boards will have device paths similar to
`/devices/pci@b,2000/pci@2/SUNW,qlc@x`.
- Under these nodes, there will be one instance of the `qlc` driver that has a device node similar to:
`/devices/pci@b,2000/pci@2/SUNW,qlc@x/fp@0,0`

- qlc driver also has a devctl node for administrative use with a name similar to /devices/pci@b,2000/pci@2/SUNW,qlc@x/fp@0,0:devctl
 - For devices found, the nodes are created depending on the WWN of the device. For a WWN of 2100002037182670, the device path is similar to /devices/pci@b,2000/pci@2/SUNW,qlc@x/fp@0,0/ssd@2100002037182670,0:a
 - Go to the <http://www.sun.com/products-n-solutions/hardware/docs> Web site, click Storage and then click Adapters and read the *Sun StorEdge 2G FC PCI Single Channel Network Adapter Product Notes* to obtain software patch IDs.
 - Go the URL in the *Sun StorEdge 2G FC PCI Single Channel Network Adapter Product Notes* to download the Fibre Channel transport device driver patches or, for updates, go to <http://sunsolve.sun.com>.
-

1.2

Tools and Equipment Needed

You might need to order fiber-optic cables. You can order them in the following lengths:

- cable coupler X9720A (SC-SC)
- 0.4-meter, part number X9721A (LC-SC)
- two-meter, part number X9722A (LC-SC)
- five-meter, part number X9723A (LC-SC)
- 15-meter, part number X9724A (LC-SC)

You will also need:

- A No. 2 Phillips screwdriver
 - An antistatic wrist strap
 - A padded antistatic mat
-

1.3

Preparing for Installation

1.3.1

Sun Enterprise Systems

The Sun StorEdge 2G FC PCI Single Channel Network Adapter does not support JTAG. When you install the PCI Network Adapter in Sun Enterprise™ 3x000-6x000 systems, be sure that the corresponding PCI riser card has the JTAG jumper removed (FIGURE 1-1).

Note – If the JTAG jumper is installed, the PCI I/O board will not be recognized or initialized during POST (power-on self-test) nor will it subsequently be recognized by the operating system.

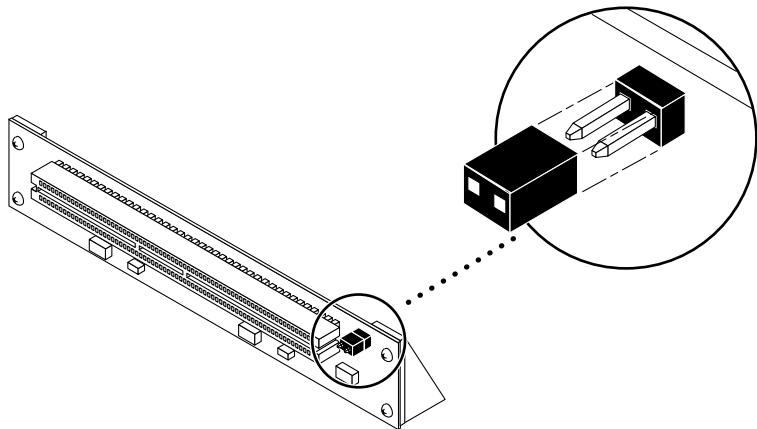


FIGURE 1-1 JTAG Jumper

1.3.2

Preparing for a Sun StorEdge A5x00 Installation

1. **Use the array's front panel module (FPM) to ensure that the firmware level of the interface boards is at least 1.09.**

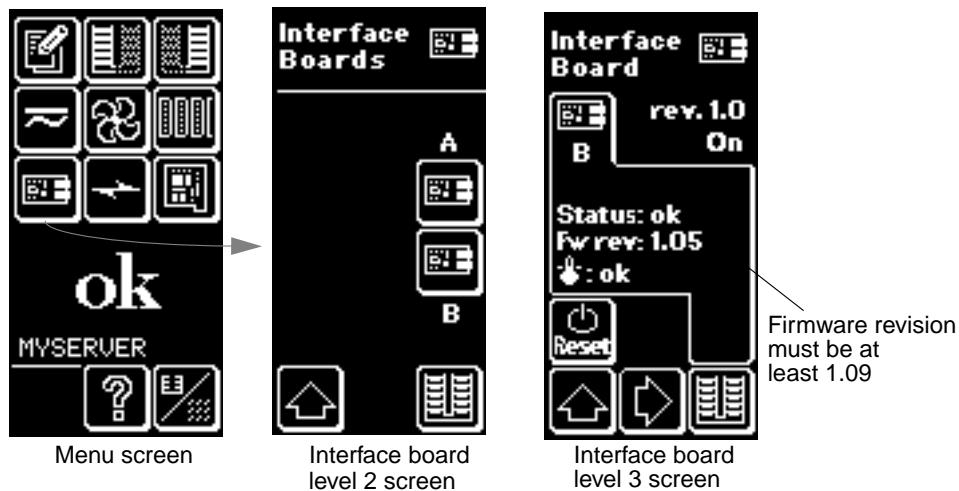


FIGURE 1-2 Checking the Sun StorEdge A5x00 Array Interface Board Firmware Level

If the firmware level is less than 1.09, you must upgrade the firmware using an SBus-based host system before you can connect the array to the Sun StorEdge 2G FC PCI Single Channel Network Adapter. The instructions for obtaining the upgrade patch are in Step 3.

2. Determine which version of the Solaris™ operating environment you are using.

Look at the `/etc/release` file and make sure the operating environment installed is at least Solaris 8. If you do not have an `/etc/release` file, you probably need to upgrade your operating environment to at least Solaris 8.

3. Get the required software:

- qlc driver
- SunVTS™

a. Go to the <http://www.sun.com/products-n-solutions/hardware/docs> Web site, click Storage and then click Adapters and read the *Sun StorEdge 2G FC PCI Single Channel Network Adapter Product Notes* to obtain software patch IDs.

b. Download the software patches from the URL listed in the *Sun StorEdge 2G FC PCI Single Channel Network Adapter Product Notes* or, for updates, go to:
<http://sunsolve.sun.com>.

Contact your support service provider if you cannot access these Web sites.

Note – Be sure to read and follow the directions in the README file for each patch.

- 4. Log in as root on your system.**
- 5. Verify that the SUNWses, SUNWssad, and SUNWvts packages have been installed on your system.**

Use the `/usr/bin/pkginfo` command and `grep` for each of the above packages. For example:

```
# /usr/bin/pkginfo | grep SUNWvts
system SUNWvts Online Validation Test Suite
```

If you are missing any of these patches, you can get them from the *Updates for Solaris Operating Environment* from your Solaris operating environment distribution.

- 6. Exit the operating environment.**

To inform any mounted users that the system will be going down, use the `shutdown` command. Otherwise, use the `init 0` command. See the man pages for these commands or the Solaris AnswerBook online documentation.

- 7. Power off the system.**

Refer to the service documentation that came with your system.



Caution – Do not disconnect the power cord at this time. This connection provides the ground path necessary to remove and install printed circuit boards and components without damage.

- 8. Choose a slot into which to install the Network Adapter.**

Follow the procedures in the documentation supplied with your system.

For systems that have more than one system board, you must also select and remove a system board that has an available PCI slot. Refer to your system documentation for specific instructions.

- 9. Attach the antistatic wrist strap to your wrist and to a metal component on the system chassis.**

The wrist strap between you and the chassis provides the ground path necessary to safely remove and install the printed circuit boards and components without damaging them.

- 10. For systems with a standby-type power switch, disconnect the power cord.**

Standby-type power switches have a icon.

- 11. Open the system.**

Refer to your system documentation for specific instructions.



Caution – If you need to remove a system board for installation, place the board on a padded antistatic mat to prevent damage.

1.4

Installing the Network Adapter

1. **Pull the dust cover out of the 2 x 5 optical transceiver (OT) connector (FIGURE 1-3).**

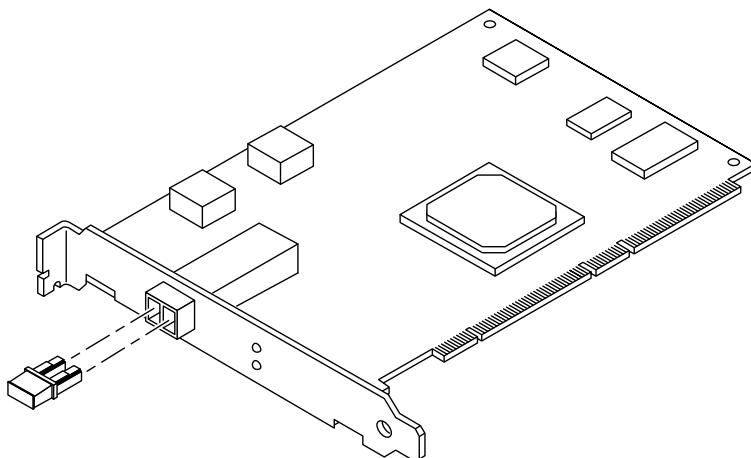


FIGURE 1-3 Sun StorEdge PCI Single 2G Fibre Channel Network Adapter Dust Covers

2. **Install the Network Adapter in the PCI slot you have chosen.**

Installation details vary for each system. Refer to your system documentation for specific instructions.

3. **Reassemble the system.**

Refer to your system documentation for specific instructions.

4. **Disconnect the wrist strap.**

5. **Push the fiber optic cable connector into the OT connector until you hear a click (FIGURE 1-4).**



Caution – Fiber optic cables have keyed connectors; they can only be inserted into OT connectors as shown in FIGURE 1-4.

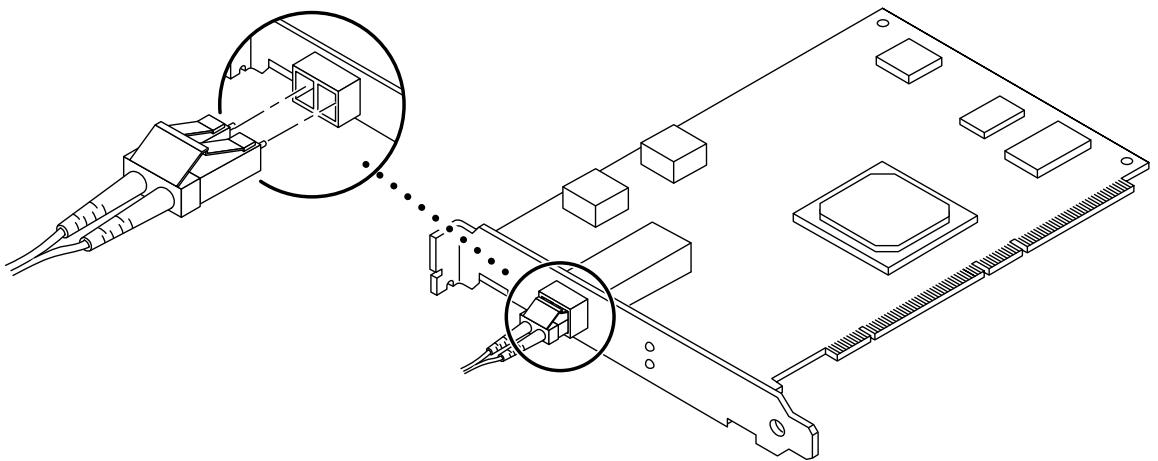


FIGURE 1-4 Connecting a Fiber Optic Cable to an OT Connector

6. Connect the other end of the fiber optic cable to a device such as an array, switch or hub.

Refer to the documentation that came with the device for specific instructions.

7. Power on your peripherals and then your system.

Note – When you power on the system, the LED lights on the host bus adapter might blink. The LEDs are intended for manufacturing use only.

Note – If your system starts to reboot, interrupt the reboot process by pressing the Stop-A keys.

The system should now be at the `ok` prompt. If a `>` prompt is showing, type `n` to switch to the `ok` prompt.

8. Make sure that the system recognizes the Network Adapter.

Use either Method A or Method B.

- a. For Method A, see CODE EXAMPLE 1-1CODE EXAMPLE 1-1 on page 1-8 and
CODE EXAMPLE 1-2 on page 1-9.**

CODE EXAMPLE 1-2 on page 1-9 is a continuation of CODE EXAMPLE 1-1 on page 1-8.

- b. For Method B, see FIGURE 1-7.**

CODE EXAMPLE 1-1 System Recognition of the Network Adapter, Method A, Part 1

```
{6} ok show-devs
/counter-timer@13,1c00
...
/counter-timer@b,1c00
/pci@b,2000
/pci@b,4000
/counter-timer@a,1c00
/fhc@a,f8800000
/pci@a,2000
/pci@a,4000
/counter-timer@3,3c00
/sbus@3,0
/counter-timer@2,3c00
/fhc@2,f8800000
/sbus@2,0
/SUNW,UltraSPARC-II@7,0
/SUNW,UltraSPARC-II@6,0
/fhc@6,f8800000
/central@1f,0
/virtual-memory
/memory@0,0
/aliases
/options
/openprom
/chosen
/packages
/pci@13,4000/SUNW,isptwo@3
/pci@13,4000/SUNW,isptwo@3/st
/pci@13,4000/SUNW,isptwo@3/sd
/fhc@12,f8800000/sbus-speed@0,500000
/fhc@12,f8800000/eeprom@0,300000
/fhc@12,f8800000/flashprom@0,0
/fhc@12,f8800000/environment@0,400000
/fhc@12,f8800000/ac@0,1000000
/pci@12,2000/SUNW,qlc@2
/pci@12,2000/SUNW,qlc@2/fp@0,0
/pci@12,2000/SUNW,qlc@2/fp@0,0/disk
```

CODE EXAMPLE 1-2 System Recognition of the Network Adapter, Method A, Part 2

```
{6} ok apply show-children /pci@12,2000/SUNW,qlc@2
LiD HA LUN --- Port WWN --- ----- Disk description -----
43 6d 0 210000203718b2e1 SEAGATE ST318203FSUN18G 114A
44 6c 0 21000020376501bf SEAGATE ST318304FSUN18G 012D
45 6b 0 21000020376502fa SEAGATE ST318304FSUN18G 012D
46 6a 0 2100002037651a7e SEAGATE ST318304FSUN18G 0726
4d 5a 0 508002000002f231 SUN SENA 1.09
40 72 0 2100002037651f78 SEAGATE ST318304FSUN18G 0726
42 6e 0 2100002037651cb4 SEAGATE ST318304FSUN18G 0726
{6} ok
```

In CODE EXAMPLE 1-2 on page 1-9, /pci@12,2000/SUNW,qlc@2 is the path to the Single Channel FC adapter board. The WorldWide Names of the Sun StorEdge A5000 Array and the disk drives inside are displayed.

CODE EXAMPLE 1-3 System Recognition of the Network Adapter, Method B

```
{6} ok select /pci@12,2000/SUNW,qlc@2
{6} ok show-children
LiD HA LUN --- Port WWN --- ----- Disk description -----
43 6d 0 210000203718b2e1 SEAGATE ST318203FSUN18G 114A
44 6c 0 21000020376501bf SEAGATE ST318304FSUN18G 012D
45 6b 0 21000020376502fa SEAGATE ST318304FSUN18G 012D
46 6a 0 2100002037651a7e SEAGATE ST318304FSUN18G 0726
4d 5a 0 508002000002f231 SUN SENA 1.09
40 72 0 2100002037651f78 SEAGATE ST318304FSUN18G 0726
42 6e 0 2100002037651cb4 SEAGATE ST318304FSUN18G 0726
{6} ok
```

Note – The probe-scsi-all command does not function identically on all platforms, and does not in all cases probe for fiber channel devices. The probe-fcal-all command exists only on Sun Enterprise™ systems.

9. Reboot your system using the boot -r command.

1.5 Testing the Installation

1.5.1 SunVTS

Refer to the SunVTS documents in TABLE 1-1 on page 1-10.

TABLE 1-1 Sun VTS Documents

Application	Title	Part Number
Diagnostic Testing	<i>SunVTS 4.5 User's Guide</i>	816-1575
	<i>SunVTS 4.5 Test Reference</i>	816-1576

SunVTS is a diagnostic program that exercises your system to verify the functionality, reliability, and configuration of your Network Adapter. You will need to install both the 32- and 64-bit versions of SunVTS.

1.5.2 Testing Procedure

1. To invoke SunVTS locally on a system running CDE, type the following as root:

```
# cd /opt/SUNWvts/bin  
# ./sunvts
```

2. From the SunVTS menus select the following:

- a. Select devices None and select intervention.
- b. Select mode Functional test.
- c. Select Host Adapter qlcx where x is the qlc number of the qlc port you want to run this test against.
- d. If you want to run the external loopback test, place a loopback plug into the qlc port that you want to test.

If you do not have an external loopback plug, you can make one by taking apart a fiber cable and plug the same cable into the transmitter and receiver of the qlc port.

e. Right click on the qlc test and select Test Parameter Options.

f. Enable the External Loopback Test.

Note – If you do not use a loopback plug, you can connect the qlc port to storage devices. In such a case, you will be testing both the qlc and the entire fiber loop.

g. Select Start to start the test.

Note – If you select only the external loopback test, the different version diagnostic tests will not be run and the delay time between tests will be set to zero. This is a good way to test your fiber loop if you leave the qlc port attached to storage devices.

Specifications

A.1 PCI Card

The Sun StorEdge 2G FC PCI Single Channel Network Adapter is a Fibre Channel PCI card with one onboard optical transceiver. This Network Adapter is PCI Version 2.2 compliant.

A.2 Fibre Channel Interface Specifications

TABLE A-1 Fibre Channel Specifications

Specification	Value
ANSI Standards	Fibre Channel FC-PH X3.230-1995 SCSI Fibre Channel Protocol X3.269-1996
Optical transceiver	200 MBytes/sec (2 Gbits/sec), full duplex Shortwave laser, Module Definition 5
Fiber cable type	50 or 62.5 micrometer multimode
Maximum cable length	150 meters for 62.5 micrometer multimode 300 meters for 50 micrometer multimode

A.3 Performance Specifications

The following specifications must be verified.

TABLE A-2 Performance Specifications

Feature	Specification
PCI clock	66 MHz maximum
PCI data burst transfer rate	528 MBytes/sec burst rate
FC-AL transfer rate payload	200 MBytes/sec
PCI data/address lines	AD63-0
PCI modes	Master/slave
Capacitance per PCI signal line	$\leq 10 \text{ pF}$, except for CLK between 5 to 12 pF and IDSEL $\leq 8 \text{ pF}$
FC Interface	2 Gbit optical (2.125 Gbits/sec)

A.4 Power Requirements

TABLE A-3 Power Requirements

Specification	Rating
Voltage and current	5V 5%,3A
Ripple	100 mV

A.5 Physical Dimensions

TABLE A-4 Physical Dimensions

Height	Width	Depth	Weight
15 mm	106.68 mm	174.63 mm	100 g
0.6 in.	4.2 in.	6.875 in.	3.6 oz.

A.6 Regulatory Compliance

TABLE A-5 Requirements Met or Exceeded by the Network Adapter

Category	Rating
Safety	UL 1950
	CSA 950
	TUV EN 60950
	Class 1 laser requirements per CFR 21, Part 1040 and IEC 825
RFI/EMI	FCC Class B
	DOC Class B
	VCCI Class B
	EMC Directive (89/336/EEC), EN55022
Immunity	EMC Directive (89/336/EEC), EN55082-1

A.7 PCI-X Edge Connector Pin Definitions: 32-Bit Cards

TABLE A-6 PCI Edge Connector Pin Definitions, 32-Bit Cards (Top)

Pin	Description	Pin	Description	Pin	Description
1	-12V	22	GND	43	+3.3V
2	TCK	23	AD27	44	C_BE1
3	GND	24	AD25	45	AD14
4	TDO	25	+3.3V	46	GND
5	+5V	26	C_BE3	47	AD12
6	+5V	27	AD23	48	AD10
7	INTB	28	GND	49	GND
8	INTD	29	AD21	50	KEYWAY
9	GND (PRSNT1)	30	AD19	51	KEYWAY
10	RESERVED	31	+3.3V	52	AD08
11	GND (PRSNT2)	32	AD17	53	AD07
12	KEYWAY	33	C_BE2	54	+3.3V
13	KEYWAY	34	GND	55	AD05
14	RESERVED	35	IRDY	56	AD03
15	GND	36	+3.3V	57	GND
16	CLK	37	DEVSEL	58	AD01
17	GND	38	GND	59	+5V
18	REQ	39	LOCK	60	ACK64
19	+3V/+5V	40	PERR	61	+5V
20	AD31	41	+3.3V	62	+5V
21	AD29	42	SERR		

TABLE A-7 PCI Edge Connector Pin Definitions, 32-Bit Cards(Bottom)

Pin	Description	Pin	Description	Pin	Description
1	TRST	22	AD28	43	PAR
2	+12V	23	AD26	44	AD15
3	TMS	24	GND	45	+3.3V
4	TDI	25	AD24	46	AD13
5	+5V	26	IDSEL	47	AD11
6	INTA	27	+3.3V	48	GND
7	INTC	28	AD22	49	AD09
8	+5V	29	AD20	50	KEYWAY
9	RESERVED	30	GND	51	KEYWAY
10	+5V	31	AD18	52	C_BE0
11	RESERVED	32	AD16	53	+3.3V
12	KEYWAY	33	+3.3V	54	AD06
13	KEYWAY	34	FRAME	55	AD04
14	RESERVED	35	IGND	56	GND
15	RST	36	TRDY	57	GND
16	+5V	37	GND	58	AD02
17	GNt	38	STOP	59	+5V
18	GND	39	+3.3V	60	REQ64
19	RESERVED	40	SDONE	61	+5V
20	AD30	41	SBO	62	+5V
21	+3.3V	42	GND		

A.8 PCI-X Edge Connector Pin Definitions: 64-Bit Cards

TABLE A-8 PCI Expansion Board Pinout—Universal Board

Pin	Side B	Side A	Pin	Side B	Side A
1	-12V	TRST#	26	C/BE[3]#	IDSEL
2	TCK	+12V	27	AD[23]	+3.3V
3	Ground	TMS	28	Ground	AD[22]
4	TDO	TDI	29	AD[21]	AD[20]
5	+5V	+5V	30	AD[19]	Ground
6	+5V	INTA#	31	+3.3V	AD[18]
7	INTB#	INTC#	32	AD[17]	AD[16]
8	INTD#	+5V	33	C/BE[2]#	+3.3V
9	PRSNT1#	Reserved	34	Ground	FRAME#
10	Reserved	+VI/O	35	IRDY#	Ground
11	PRSNT2#	Reserved	36	+3.3V	TRDY#
12	Keyway	Keyway	37	DEVSEL#	Ground
13	Keyway	Keyway	38	Ground	STOP#
14	Reserved	3.3Vaux	39	LOCK#	+3.3V
15	Ground	RST#	40	PERR#	SDONE
16	CLK	+VI/O	41	+3.3V	SBO#
17	Ground	GNT#	42	SERR#	Ground
18	REQ#	Ground	43	+3.3V	PAR
19	+VI/O	PME#	44	C/BE[1]#	AD[15]
20	AD[31]	AD[30]	45	ad[14]	+3.3V
21	AD[29]	+3.3V	46	Ground	AD[13]
22	Ground	AD[28]	47	AD[12]	AD[11]
23	AD[27]	AD[26]	48	AD[10]	Ground
24	AD[25]	Ground	49	M66EN	AD[09]
25	+3.3V	AD[24]	50	Keyway	Keyway

TABLE A-9 PCI Expansion Board Pinout—Universal Board

Pin	Side B	Side A	Pin	Side B	Side A
51	Keyway	Keyway	76	Ground	AD[52]
52	AD[08]	C/BE[0]#	77	AD[51]	AD[50]
53	AD[07]	+3.3V	78	AD[49]	Ground
54	+3.3V	AD[06]#	79	+VI/O	AD[48]
55	AD[05]	AD[04]#	80	AD[47]	AD[46]
56	AD[03]	Ground	81	AD[45]	Ground
57	Ground	AD[02]	82	Ground	AD[44]
58	AD[01]	AD[00]	83	AD[43]	AD[42]
59	+VI/O	+VI/O	84	AD[41]	+VI/O
60	ACK64#	REQ64#	85	Ground	AD[40]
61	+5V	+5V	86	AD[39]	AD[38]
62	+5V	+5V	87	AD[37]	Ground
	Keyway	Keyway	88	+VI/O	AD[36]
	Keyway	Keyway	89	AD[35]	AD[34]
63	Reserved	Ground	90	AD[33]	Ground
64	Ground	C/BE[7]#	91	Ground	AD[32]
65	C/BE[6]#	C/BE[5]#	92	Reserved	Reserved
66	C/BE[4]#	+VI/O	93	Reserved	Ground
67	Ground	PAR64	94	Ground	Reserved
68	AD[63]	AD[62]			
69	AD[61]	Ground			
70	+VI/O	AD[60]			
71	AD[59]	AD[58]			
72	AD[57]	Ground			
73	Ground	AD[56]			
74	AD[55]	AD[54]			
75	AD[53]	+VI/O			

Booting From the Network Adapter

Booting from the network adapter requires special procedures in order to enable detection of installation devices. To boot from the small kernel image on the network adapter, you must use either a boot/install server or a temporarily directly-connected boot disk to enable bootability. The method using a boot install server is the Net Install Patching method and the method using a directly-connected boot disk is the Dump and Restore method. Both procedures should be performed by a knowledgeable UNIX system administrator.

The two methods are explained in this appendix in the sections:

- [Section B.1 “The Net Install Method” on page B-2](#)
- [Section B.2 “The Dump and Restore Method” on page B-8](#)

The Dump and Restore method is more difficult than the Net Install Patching method and you might experience complications in the loss of the boot. However, the method is available to anyone with existing systems, whether small or large configurations, and it provides a disk image when you have completed the process.

The Net Install Patching method requires a jump-start server and network connectivity, and it is more suitable for large system configurations than for small ones. This method is easier than the Dump and Restore method and mitigates the risk of data loss.

Note – These procedures are necessary if the network adapter card driver is not bundled with the Solaris operating environment on the boot server on the network. Check your Solaris operating environment to determine whether the driver is bundled with it.

Booting through a network adapter is mandatory when the host is an enterprise-level system or other system that does not have its own directly-connected disks. It is optional and preferable when a host has a directly-connected disk, you might prefer to boot through the adapter because the 2 Gb connection is faster.

B.1

The Net Install Method

This section contains a bootability method that is different from the one starting at Section B.2 “The Dump and Restore Method” on page B-8. The topics in this section include:

- Section B.1.1 “Overview For the Net Install Method” on page B-2
- Section B.1.2 “To Set Up the Boot/Install Server” on page B-3
- Section B.1.3 “To Modify the Boot Image” on page B-5
- Section B.1.4 “To Set Up the Client” on page B-6

The procedures in this section explain how to install the Solaris operating environment from a boot/install server onto the host with the host adapter. Any other host on the same subnet can be set up as a boot/install server.

Note – The procedure is identical whether you are using a boot server or an install server.¹ Therefore, the convention used in this chapter is to refer to either type of server as the “boot/install server.”

B.1.1

Overview For the Net Install Method

Installing a client from a boot/install server uses two images of the Solaris operating environment:

- A boot mini-root (which is referred to from here on as the *boot image*)
- A separate *install image* that gets copied onto the boot disk

This procedure assumes you know how to install Solaris software over the network as described in the Solaris installation manuals. For more information, see the `man(1)` pages for the commands that are used in this procedure.

Note – While you are setting up the boot/install server, you must either have the contents of the Solaris installation CD-ROM copied to a disk that is directly-connected to the boot/install server or have the Solaris installation CD inserted and mounted from an attached CD-ROM device.

1. For the distinction between these two types of server, see the Solaris system administration documentation.

You need to enable bootability using a boot/install server to make both images aware of the host adapter. At the start of the procedure, the system administrator downloads the driver and all required patches to an exported directory on the boot/install server.

The following steps explain the process. For actual instructions, begin with Section B.1.2 “To Set Up the Boot/Install Server” on page B-3.

1. The *boot image* is copied from a Solaris CD-ROM or from another location onto a disk that is attached to a boot/install server.

2. The driver package is added to the boot image.

You add the driver package to the boot image so that the boot/install server can then send and receive data through the host adapter on the boot client.

3. The client boots from the boot/install server, the interactive `suninstall(1M)` application starts, and the system administrator provides configuration information requested at the prompts.

4. After the system administrator provides all configuration information requested by the installation program, the installation of the Solaris operating environment begins.

5. The install image is copied to the client.

6. Before a reboot, while the client is still booted from the boot image mini-root, the driver and any needed patches are copied from the boot/install server and then installed in the *install image*.

You install the driver package and patch the install image so that the host will be able to see the host adapter after a reboot.

Note – You can not use Jump Start until you modify the install image.

7. The host boots from the boot disk through the network adapter.

B.1.2

To Set Up the Boot/Install Server

1. Switch users to root on the host to be used as the boot/install server.

```
% su  
Password:  
#
```

2. Use the `setup_install_server(1M)` command from the `Tools` directory in the location where the Solaris software resides.

As shown in the following screen example, the `setup_install_server` command copies the boot image to a directory on the boot/install server. (The boot directory is named `/boot_dir <original_OS_dir>/Boot` in the example.) The example shows the command being run from the `Tools` directory on a mounted Solaris 8 installation CD-ROM.

```
# cd /cdrom/cdrom0/s0/Solaris_8/Tools  
# ./setup_install_server -t <original_OS_dir>/Boot <new_OS_copy_dir>
```

3. Download the driver packages and the accompanying `README` file from Sun's download center into the `/<export_public>` directory on the boot/install server.
 - a. Go to the download center URL specified in the instructions on how to download the network adapter driver in the product notes.
 - b. Download the `README` file.
 - c. Remove any previously-installed packages for this network adapter as instructed in the `README`.
 - d. Download the packages as described in the instructions in the release notes.
 - e. Use the `uncompress(1M)` and `tar(1M)` commands to uncompress and expand the packages in the `tar` file, as instructed in the `README`.



Caution – Do not use the `pkgadd(1M)` command line that is given in the `README` to install the packages. See Section B.1.3 “To Modify the Boot Image” on page B-5 to install relocatable versions of the packages.

4. Download the required patch(es) and the accompanying `README` file(s) from `sunsolve.sun.com` into the `/<export_public>` directory on the boot/install server.
 - a. See the release notes for a list of required patches.
 - b. Go to the URL specified in the instructions on how to download the network adapter driver required patch(es) in the release notes.
 - c. Download the `README` file.
 - d. Remove any previously-installed related patches that may be specified in the `README`.
 - e. Download the patch(es) as described in the instructions in the release notes.

- f. Use the **uncompress(1M)** and **tar(1M)** commands to uncompress and expand the patch(es) in the tar file, as instructed in the README.



Caution – Do not use the **patchadd(1M)** command line that is given in the README to install the patch(es). See Section B.1.3 “To Modify the Boot Image” on page B-5 to install relocatable versions of the patch(es).

B.1.3

To Modify the Boot Image

1. Install the driver packages into the boot image.

The following example installs all packages previously downloaded into the */<export_public>* directory.

Note – Refer to the *install_order* file for the proper order in which to install the packages. You must follow this order for a successful installation so the driver will run.

```
# cd /<export_public>
# pkgadd -R /<new_OS_copy_dir>/Boot -d .
```

2. Install any needed patches into the boot image.

The following example installs any patch(es) that were previously downloaded into the */<export_public>* directory. Repeat the **patchadd** command for all the patches you need to add.

```
# cd /<export_public>
# patchadd -C /<new_OS_copy_dir>/Boot -M /<export_public> <patch_ID>
```

3. Make sure the host name, its IP address, and its Ethernet address have been added to the name service (*/etc* files, NIS, or NIS+).

4. Run the **add_install_client(1M)** command to add the host with the host adapter as a boot/install client.

The example shows the **add_install_client** command followed by the name of the host followed by its platform name.

```
# add_install_client <host_name> <platform_name>
```

Note – You can find the platform name by running the `uname` command with the `-m` option on the host that has the host adapter.

5. Log out of the boot/install server.

B.1.4 To Set Up the Client

1. Bring the client host (with the host adapter) down to the `ok` prompt at run level 0.

See the Solaris system administration documentation for the commands that can be used with different configurations. The following example uses the `shutdown(1M)` command.

```
# shutdown  
...  
ok
```



Caution – Do not reboot the boot/install server.

2. Boot the host from the net.

```
ok boot net
```

The Solaris interactive installation program runs from the boot/install server.

3. Respond to the prompts according to your configuration, as instructed in the Solaris installation guide.

Make sure to specify the new boot disk as the destination for the operating environment installation.

4. When prompted to choose between automatic reboot or manual reboot, click the Manual Reboot button, complete the remaining question, and start the installation.

This question offering a choice between automatic and manual reboot is the last question before the installation starts. If you are using the `suninstall` program, choose `boot manual`.

5. Mount the /<export_public> directory which contains the driver packages and any needed patches onto the /mnt directory mount point.

Enter the mount command followed by the hostname of the boot/install server, followed by a colon (:), followed by /<export_public> followed by /mnt. The following example uses boot_install_server as the name of the boot/install server.

```
# mount boot_install_server:/<export_public> /a/mnt
```

6. Install the driver packages into the install image.

The following example installs all packages previously downloaded into the /<export_public> directory. When prompted, install the packages in the order of SUNWsan, SUNWcfpl, SUNWcfplx.

```
# cd /a/mnt  
# pkgadd -R /a -d .
```

7. Install any needed patches into the boot image.

The following example installs all patch(es) that were previously downloaded into the /<export_public> directory.

Note – Install the patches in their sequential numeric order to ensure the installation is successful.

```
# cd /a/mnt  
# patchadd -R /a <patch_ID>
```

8. Bring the system down to the ok prompt at run level 0.

```
# halt
```

9. Reboot the host from the newly installed operating environment.

```
ok boot -r
```

B.2

The Dump and Restore Method

This section contains a bootability method that is different from the one starting at Section B.1 “The Net Install Method” on page B-2. The topics in this section include:

- Section B.2.1 “Overview Of the Dump and Restore Method” on page B-8
- Section B.2.2 “Partitioning the New Boot Disk the Same As the Temporary Boot Disk” on page B-8
- Section B.2.3 “To Create File Systems on the New Boot Disk” on page B-18
- Section B.2.4 “To Create the New Boot Files” on page B-18

B.2.1

Overview Of the Dump and Restore Method

To enable bootability using a temporary boot disk, a boot disk must be directly connected, at least temporarily, to the host. The boot disk must have the following installed:

- The Solaris operating environment.
 - The network adapter driver packages and any needed patches
- See the release notes for how to download and install the driver packages and any needed patches.

Note – The initial boot disk can be removed if it is not needed after the boot disk is enabled.

Note – The examples in this section show disk 0 as the directly-connected boot disk, and disk 2 as the designated new boot disk that is connected through the host adapter.

B.2.2

Partitioning the New Boot Disk the Same As the Temporary Boot Disk

There are several sub procedures required to complete the first phase of enabling bootability from a temporarily connected boot disk. These sub procedures include:

- Section B.2.2.1 “To Prepare To Partition the New Disk” on page B-9
- Section B.2.2.2 “To Record the Partition Layout” on page B-9

- Section B.2.2.3 “To Change To the New Boot Disk” on page B-12
- Section B.2.2.4 “To Specify Slices On the New Boot Disk” on page B-13
- Section B.2.2.5 “To Label the New Boot Disk” on page B-17

B.2.2.1 To Prepare To Partition the New Disk

1. Switch users to root on the host with the host adapter.

```
% su  
Password:  
#
```

2. If the driver and any needed patches are not already installed, download the driver package from Sun’s download center and install it on the host, following the instructions in the README file that comes with the driver.

To download the driver, follow the instructions in the release notes.

3. Reboot using the `reboot(1M)` command with the `-r` option.

```
# reboot -- -r
```

4. Log into the host as root.

B.2.2.2 To Record the Partition Layout

After you log back into the host, you can record the layout of the partitions, or slices, on the system boot disk.

1. Enter the `format(1M)` command.

If needed, see the `format` man page and the instructions on adding a disk and using the `format` command in the Solaris administration documentation.

Note – These examples use disk 0 as the temporary disk (c0t0d0) and disk 2 (c7t16d0) as the new boot disk.

```
# format
Searching for disks...done

AVAILABLE DISK SELECTIONS:
  0. c0t1d0 <SUN18G cyl 7506 alt 2 hd 19 sec 248>
     /pci@8,600000/SUNW,qlc@4/fp@0,0/ssd@w2100002037e43542,0
  1. c0t2d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /pci@8,600000/SUNW,qlc@4/fp@0,0/ssd@w21000020374205a1,0
  2. c7t16d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /pci@8,600000/SUNW,qlc@1/fp@0,0/ssd@w500000e01002b7c1,0
  3. c7t17d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /pci@8,600000/SUNW,qlc@1/fp@0,0/ssd@w500000e0100357c1,0
  4. c7t18d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /pci@8,600000/SUNW,qlc@1/fp@0,0/ssd@w500000e010032331,0
  5. c7t19d0 <drive not available: formatting>
     /pci@8,600000/SUNW,qlc@1/fp@0,0/ssd@w500000e010032661,0
  6. c7t20d0 <SUN36G cyl 24620 alt 2 hd 27 sec 107>
     /pci@8,600000/SUNW,qlc@1/fp@0,0/ssd@w500000e0100369e1,0
Specify disk (enter its number):
```

2. Make a note of the device path name of the new boot disk.

For example, for disk 2, the new boot disk in this example, the device path name shown is:/pci@8,600000/SUNW,qlc@1/fp@0,0. You use this information later in Step 4 in Section B.2.4.4 “To Specify the New Boot Disk as the Boot Device.” on page B-22.

Note – The qlc number changes, depending on the type of host and slot in use.

3. Specify the disk where the operating system is installed on the temporary boot disk.

The following screen example specifies disk 2.

```
Specify disk (enter its number): 2
```

4. Enter the partition command to bring up the PARTITION MENU.

```
format> partition
PARTITION MENU:
    0      - change '0' partition
    1      - change '1' partition
    2      - change '2' partition
    3      - change '3' partition
    4      - change '4' partition
    5      - change '5' partition
    6      - change '6' partition
    7      - change '7' partition
    select - select a predefined table
    modify - modify a predefined partition table
    name   - name the current table
    print  - display the current table
    label  - write partition map and label to the disk
    !<cmd> - execute <cmd>, then return
    quit
partition>
```

5. Enter the print command to display the partition table for the specified disk.

```
partition> print
Current partition table (original):
Total disk cylinders available: 3880 + 2 (reserved cylinders)

      Part     Tag     Flag      Cylinders        Size          Blocks
        0    root    wm        0 - 1937    2.00GB    (1938/0/0) 4186080
        1    swap    wu      1938 - 2908    1.00GB    (971/0/0) 2097360
        2  backup    wm        0 - 3879    4.00GB    (3880/0/0) 8380800
        3 unassigned    wm        0           0    (0/0/0)        0
        4 unassigned    wm        0           0    (0/0/0)        0
        5 unassigned    wm        0           0    (0/0/0)        0
        6 unassigned    wm        0           0    (0/0/0)        0
        7    home    wm      2909 - 3879    1.00GB    (971/0/0) 2097360
```

As shown in the example, the temporary boot disk has three slices defined: 0 (root), 1 (swap), and 7 (home) with sizes, 2.00GB, 1.00GB, and 1.00GB.

6. Record the layout (sizes and numbers) assigned to the slices on the temporary boot disk, and enter **quit** when done.

```
partition> quit
FORMAT MENU:
    disk      - select a disk
    type      - select (define) a disk type
    partition - select (define) a partition table
    current   - describe the current disk
    format    - format and analyze the disk
    repair    - repair a defective sector
    label     - write label to the disk
    analyze   - surface analysis
    defect    - defect list management
    backup    - search for backup labels
    verify   - read and display labels
    save     - save new disk/partition definitions
    inquiry   - show vendor, product and revision
    volname   - set 8-character volume name
    !<cmd>   - execute <cmd>, then return
    quit
format>
```

As shown in the previous example, the **quit** command returns you to the FORMAT MENU.

B.2.2.3

To Change To the New Boot Disk

After you record the partition layout, change to the new boot disk.

1. At the **format> prompt**, type **disk** to change the current disk to the new boot disk.

2. Enter the number of the disk to be formatted after the disk command.

The following screen example uses disk 2. The FORMAT MENU appears.

```
format> disk 2
selecting c7t16d0
[disk formatted]

FORMAT MENU:
    disk      - select a disk
    type      - select (define) a disk type
    partition - select (define) a partition table
    current   - describe the current disk
    format    - format and analyze the disk
    repair    - repair a defective sector
    label     - write label to the disk
    analyze   - surface analysis
    defect    - defect list management
    backup    - search for backup labels
    verify    - read and display labels
    save      - save new disk/partition definitions
    inquiry   - show vendor, product and revision
    volname   - set 8-character volume name
    !<cmd>   - execute <cmd>, then return
    quit
format>
```

3. Make a note of the device name of the disk.

The device name of the disk in the previous screen example is c7t16d0.

B.2.2.4

To Specify Slices On the New Boot Disk

After you change to the new boot disk, specify one slice on the new boot disk for every slice on the temporary boot disk. The following examples specify the root slice 0 on the new boot disk to match slice 0 on the temporary boot disk.

1. Enter the partition command to bring up the PARTITION MENU.

```
format> p
PARTITION MENU:
    0      - change '0' partition
    1      - change '1' partition
    2      - change '2' partition
    3      - change '3' partition
    4      - change '4' partition
    5      - change '5' partition
    6      - change '6' partition
    7      - change '7' partition
select - select a predefined table
modify - modify a predefined partition table
name   - name the current table
print   - display the current table
label   - write partition map and label to the disk
!<cmd> - execute <cmd>, then return
quit
partition>
```

2. Enter the number of the slice to be defined.

Slice 0 is specified in the following example. As shown, the partition table for the new boot disk displays.

```
partition> 0
Current partition table (original):
Total disk cylinders available: 24620 + 2 (reserved cylinders)

Part      Tag     Flag      Cylinders          Size        Blocks
  0      root    wm        0 -     90      128.37MB  (91/0/0)    262899
  1      swap    wu        91 -    181      128.37MB  (91/0/0)    262899
  2      backup   wu        0 -  24619      33.92GB  (24620/0/0) 71127180
  3 unassigned   wm        0           0          (0/0/0)      0
  4 unassigned   wm        0           0          (0/0/0)      0
  5 unassigned   wm        0           0          (0/0/0)      0
  6      usr     wm       182 - 24619      33.67GB  (24438/0/0) 70601382
  7 unassigned   wm        0           0          (0/0/0)      0
Enter partition id tag[root]:
```

3. Enter the partition ID tag.

The following example shows a question mark (?) entered after the prompt. The list of accepted partition id tags displays. The example then shows the default partition id tag of root accepted by pressing the Return key.

```
Enter partition id tag[root]: ?
Expecting one of the following: (abbreviations ok):
    unassigned      boot        root        swap
          usr       backup      stand       var
Enter partition id tag[root]:
Enter partition permission flags[wm]:
```

4. Enter the partition permission flags.

The following example shows the default permission flags wm accepted by pressing the Return key.

```
Enter partition permission flags[wm]:
Enter new starting cyl[0]:
```

5. Enter the new starting cylinder.

The following example shows the default new starting cylinder of 0 accepted by pressing the Return key.

```
Enter new starting cyl[0]:
Enter partition size[262899b, 91c, 128.37mb, 0.13gb]:
```

6. Enter the partition size.

The following example shows the partition size of 2.00gb entered.

```
Enter partition size[262899b, 91c, 128.37mb, 0.13gb]: 2.00gb
partition>
```

7. Enter the **print command to display the updated partition table.**

The following example shows that the **root** tag, the **wm** permissions flag, and the partition size of **2.00GB** are assigned to slice 0.

```
partition> print
Current partition table (unnamed):
Total disk cylinders available: 24620 + 2 (reserved cylinders)

Part      Tag     Flag        Cylinders          Size            Blocks
  0      root    wm        0 - 1451       2.00GB   (1452/0/0)  4194828
  1      swap    wu        91 - 181      128.37MB  (91/0/0)   262899
  2      backup   wu        0 - 24619      33.92GB  (24620/0/0)
71127180
  3 unassigned    wm        0              0      (0/0/0)           0
  4 unassigned    wm        0              0      (0/0/0)           0
```

8. Repeat Step 2 through Step 7 as needed until all slices are defined as they are in the temporary boot disk.

9. Enter the **quit command to return to the FORMAT MENU.**

```
partition> quit

FORMAT MENU:
  disk      - select a disk
  type      - select (define) a disk type
  partition - select (define) a partition table
  current   - describe the current disk
  format    - format and analyze the disk
  repair    - repair a defective sector
  label     - write label to the disk
  analyze   - surface analysis
  defect    - defect list management
  backup    - search for backup labels
  verify    - read and display labels
  save      - save new disk/partition definitions
  inquiry   - show vendor, product and revision
  volname   - set 8-character volume name
  !<cmd>   - execute <cmd>, then return
  quit
format>
```

B.2.2.5

To Label the New Boot Disk

After you specify the slices on the new boot disk, label the new boot disk with the new partition table.

1. Enter the **label** command

```
format> label
```

2. Enter **y[es]** to continue.

```
Ready to label disk, continue? y
```

3. When the labeling is complete, enter **q[uit]** to quit the **format** program.

```
format> q  
#
```

B.2.3 To Create File Systems on the New Boot Disk

- **Create a file system on each slice on the disk using the newfs(1M) command.**

Enter the newfs command followed by the device name of the slice. In this example, the device name for slice 0 of disk c7t16d0 is /dev/rdsk/c7t16d0s0.

```
# newfs /dev/rdsk/c7t16d0s0
newfs: construct a new file system /dev/rdsk/c7t16d0s0: (y/n)? y
/dev/rdsk/c7t16d0s0:      4194828 sectors in 1452 cylinders of 27 tracks, 107
sectors
          2048.3MB in 46 cyl groups (32 c/g, 45.14MB/g, 7488 i/g)
super-block backups (for fsck -F ufs -o b=#) at:
 32, 92592, 185152, 277712, 370272, 462832, 555392, 647952, 740512, 833072,
 925632, 1018192, 1110752, 1203312, 1295872, 1388432, 1480992, 1573552,
 1666112, 1758672, 1851232, 1943792, 2036352, 2128912, 2221472, 2314032,
 2406592, 2499152, 2591712, 2684272, 2776832, 2869392, 2958368, 3050928,
 3143488, 3236048, 3328608, 3421168, 3513728, 3606288, 3698848, 3791408,
 3883968, 3976528, 4069088, 4161648,
```

For more information, see the section on how to create file systems in the Solaris system administration documentation.

Do this step to create a file system on the new boot disk for every slice on the temporary boot disk. When you are finished, go to Section B.2.4.3 “To Copy the Contents of Non-root File Systems onto the New Boot Disk” on page B-21.

B.2.4 To Create the New Boot Files

This section has several sub procedures, including:

- Section B.2.4.1 “To Copy the Boot Block and Root File System Contents To the New Boot Disk” on page B-19
- Section B.2.4.2 “To Update the vfstab File” on page B-20
- Section B.2.4.3 “To Copy the Contents of Non-root File Systems onto the New Boot Disk” on page B-21
- Section B.2.4.4 “To Specify the New Boot Disk as the Boot Device.” on page B-22

B.2.4.1 To Copy the Boot Block and Root File System Contents To the New Boot Disk

1. Install the boot block on the root (/) file system of the new disk.

The following example uses the `installboot(1M)` command to install the boot block. The boot block resides in the

`/usr/platform/platform_name/lib/fs/ufs/bootblk` directory. The example shows invoking the `uname` command with the `-i` option between left single quotes on the command line to specify the platform name.

```
# /usr/sbin/installboot /usr/platform/'uname -i'/lib/fs/ufs/bootblk \
/dev/rdsck/c7t16d0s0
```

For more information, see the instructions on how to install a boot block in the Solaris system administration documentation.

2. Mount the root file system from slice 0 of the new boot disk onto the `/mnt` mount point.

```
# mount /dev/dsk/c7t16d0s0 /mnt
```

3. Use the `ufsdump(1M)` and `ufsrestore(1M)` commands to copy the contents of the root file system from the temporary boot disk to the root slice of the new boot disk (on the `/mnt` mount point).

```
# ufsdump Of - /dev/rdsck/c0t0d0s0 | ( cd /mnt; ufsrestore rf - )
DUMP: Writing 32 Kilobyte records
DUMP: Date of this level 0 dump: Tue 19 Feb 2002 02:44:35 PM PST
DUMP: Date of last level 0 dump: the epoch
DUMP: Dumping /dev/rdsck/c7t16d0s0 (hba2-81:/) to standard
output.
DUMP: Mapping (Pass I) [regular files]
DUMP: Mapping (Pass II) [directories]
DUMP: Estimated 1818082 blocks (887.74MB).
DUMP: Dumping (Pass III) [directories]
DUMP: Dumping (Pass IV) [regular files]
Warning: ./lost+found: File exists
DUMP: 88.77% done, finished in 0:01
DUMP: 1818046 blocks (887.72MB) on 1 volume at 1363 KB/sec
DUMP: DUMP IS DONE
#
```

4. Unmount the root file system on slice 0 from the /mnt mount point.

```
# umount /mnt
```

B.2.4.2 To Update the vfstab File

After you copy the boot block and root files, update the vfstab file.

1. Mount the root file system from slice 0 of the new boot disk onto the /mnt mount point.

```
# mount /dev/dsk/c7t16d0 /mnt
```

2. Change directories to /mnt/etc and open the vfstab(4) file for editing.

The following example shows the file systems defined.

```
# cd /mnt/etc
# vi vfstab
...
/dev/dsk/c0t0d0s1      -      -      swap      -      no      -
/dev/dsk/c0t0d0s0      /dev/rdsks/c0t0d0s0      /      ufs      1      no  -
/dev/dsk/c0t0d0s7      /dev/rdsks/c0t0d0s7      /home    ufs      2      yes  -
```

3. Replace the name of the temporary boot disk with the name of the new boot disk, and then save and quit the file.

The following example shows the disk name c0t0 changed to c3t8 in the mount table entries for slices 0, 1, and 7.

```
/dev/dsk/c7t16d0s1      -      -      swap      -      no      -
/dev/dsk/c7t16d0s0      /dev/rdsks/c7t16d0s0      /      ufs      1      no  -
/dev/dsk/c7t16d0s7      /dev/rdsks/c7t16d0s7      /home    ufs      2      yes  -
:wq
#
```

B.2.4.3 To Copy the Contents of Non-root File Systems onto the New Boot Disk

1. Mount the file system onto the /mnt mount point.

This example shows the copying of the /home file system from slice 7 to the new boot disk.

```
# mount /dev/dsk/c7t16d0 /mnt
```

2. Use the ufsdump(1M) and ufsrestore(1M) commands to copy the contents of the file system from the temporary boot disk to the new boot disk.

```
# ufsdump Of - /dev/rdsck/c0t0d0s0 | ( cd /mnt; ufsrestore rf - )
DUMP: Writing 32 Kilobyte records
DUMP: Date of this level 0 dump: Tue 19 Feb 2002 02:44:35 PM PST
DUMP: Date of last level 0 dump: the epoch
DUMP: Dumping /dev/rdsck/c7t16d0s0 (hba2-81:/) to standard
output.
DUMP: Mapping (Pass I) [regular files]
DUMP: Mapping (Pass II) [directories]
DUMP: Estimated 1818082 blocks (887.74MB).
DUMP: Dumping (Pass III) [directories]
DUMP: Dumping (Pass IV) [regular files]
Warning: ./lost+found: File exists
DUMP: 88.77% done, finished in 0:01
DUMP: 1818046 blocks (887.72MB) on 1 volume at 1363 KB/sec
DUMP: DUMP IS DONE
#
```

3. Unmount the file system from the /mnt mount point.

```
# umount /mnt
```

4. Repeat Step 1 through Step 3 as needed until you have copied all the file systems' contents to the new boot disk. When finished, go to Section B.2.4.2 "To Update the vfstab File" on page B-20.

B.2.4.4

To Specify the New Boot Disk as the Boot Device.

1. Bring the host with the host adapter down to the **ok** prompt at run level 0.

See the Solaris system administration documentation on shutting down a host for the commands that can be used with different configurations. The following screen example uses the shutdown(1M) command.

```
# shutdown  
...  
ok
```

2. Use the **nvalias** command to alias the device name of the disk to a short name for the disk.

The following example uses

/pci@8,600000/SUNW,qlc@1/fp@0,0/disk@10,0, which was the device path name for disk 2 in Section B.2.2.2 “To Record the Partition Layout” on page B-9.

```
ok nvalias disk2 /pci@8,600000/SUNW,qlc@1/fp@0,0/disk@10,0
```

3. Use the **nvstore** command to store the new alias followed by the **reset all** command.

```
ok nvstore  
ok reset-all
```

4. Define the new boot disk as the default boot-device.

Use the data gathered in Step 2 on page 10.

a. Enter the **setenv** command followed by the **boot-device** parameter followed by the name of the new disk.

```
ok setenv boot-device disk2
```

b. Enter the **reset** command.

```
ok reset
```

5. Enter the **boot** command with the **-r** option so that the Solaris operating environment can recognize the adapter.

```
ok boot -r
```

